
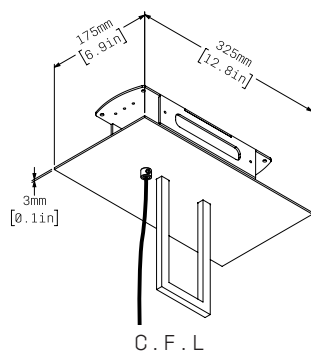
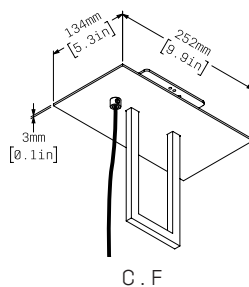
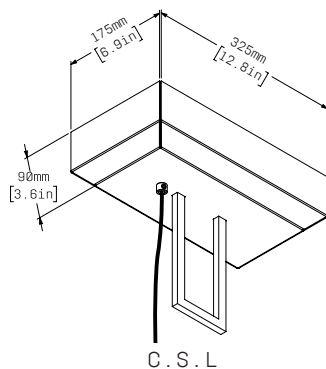


CHAIN CANOPY

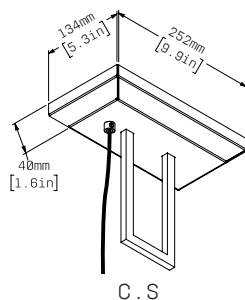

CODE :

C F L
SHAPE STYLE SIZE

Suits chain suspension only and low voltage fixtures.

Canopy matches selected pendant finish unless alternative finish is specified.

COMPATIBLE FIXTURES:

NEPENTHES

JUNCTION BOX COMPATIBLE:

Yes


INSTALLATION:

Refer to Installation Guide for full information.

The CHAIN SURFACE Canopy sits proud on the visible surface of the ceiling.

Designed to house control gear when ceiling cavity access or remote location of control gear is impossible.

Comprised of a Pendant Suspension Bracket fixed to surface of ceiling with an external Escutcheon.

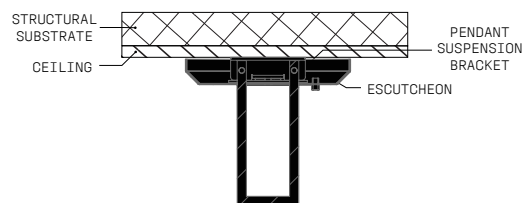


CROSS-SECTION

The CHAIN FLUSH Canopy sits flush on the visible surface of the ceiling.


Designed to house control gear in ceiling cavity.

Comprised of a Pendant Suspension Bracket fixed inside ceiling cavity with an external Escutcheon.

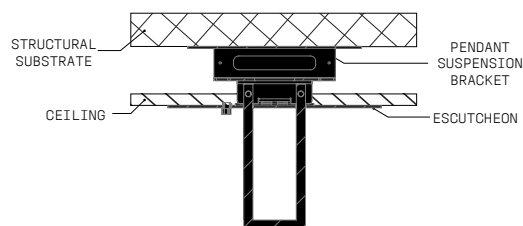

CROSS-SECTION

CHAIN FLUSH CANOPY

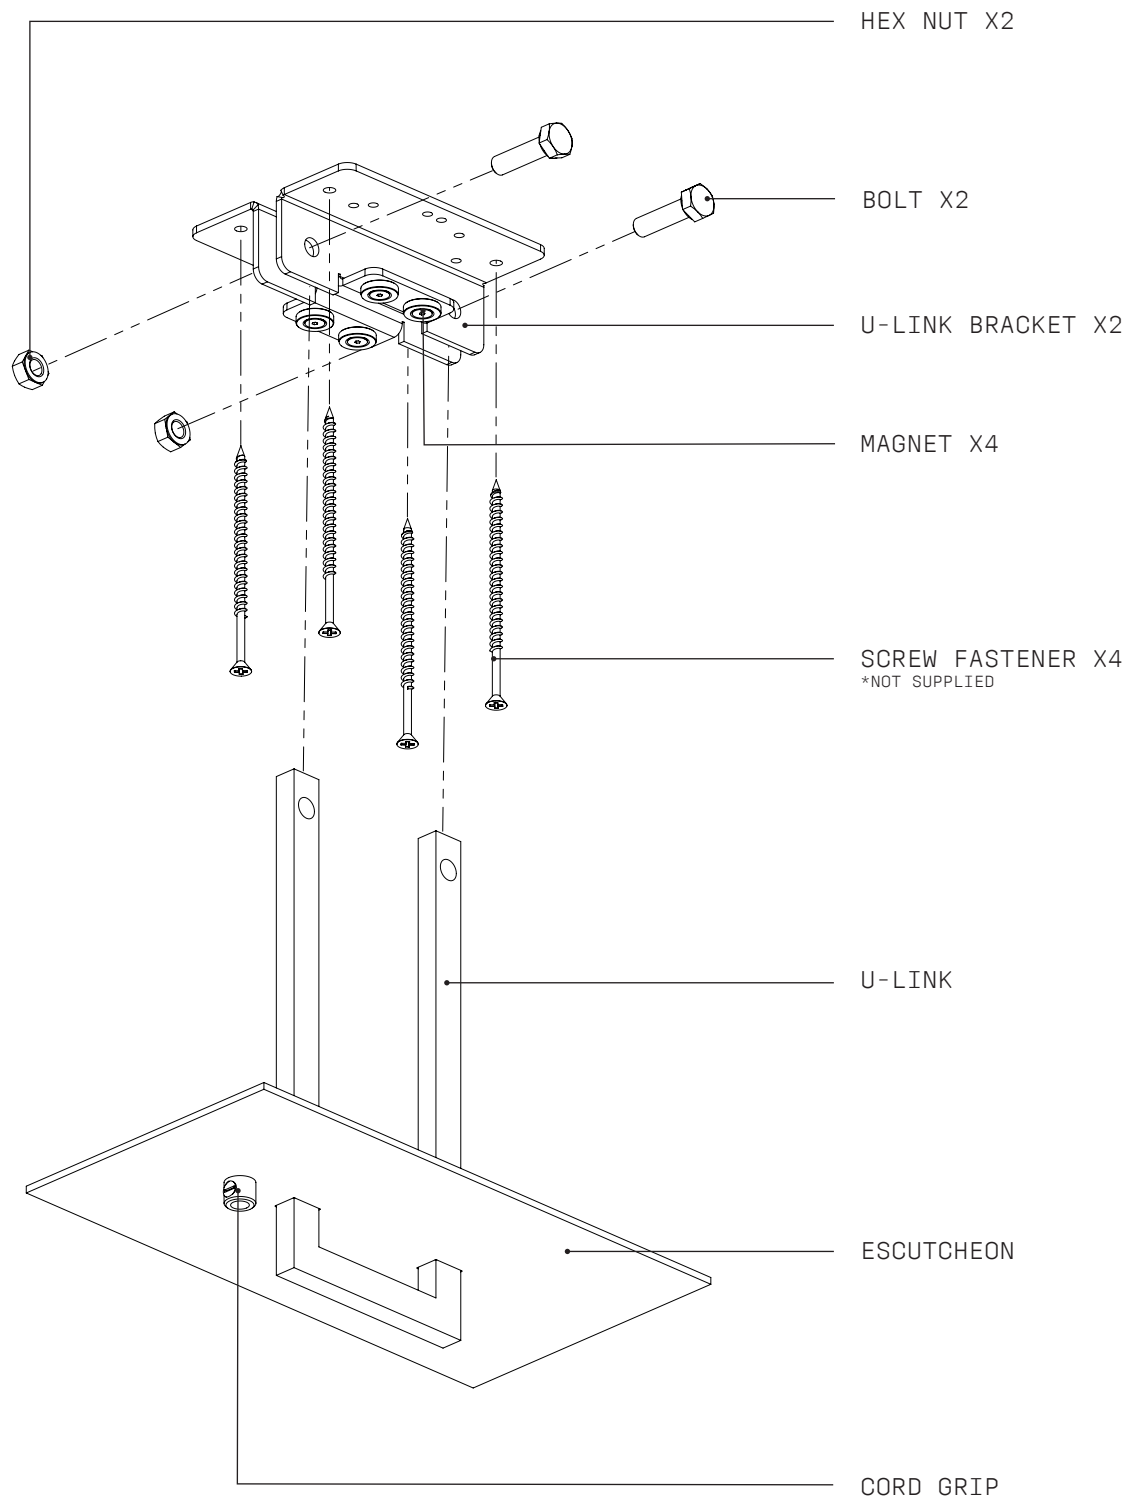


- 1 Wearing gloves, unpack all the components for the CHAIN FLUSH CANOPY with care, ensuring not to scratch the surface of the ESCUTCHEON or the U-LINK.




DO NOT REMOVE THE SCRATCH GUARD BEFORE COMPLETION.

- 2 Prepare the ceiling by cutting an opening in the ceiling for the U-LINK BRACKETS. Refer to illustration below for dimensions.

Use the template, on the last page of this document to drill out the x4 pilot holes on the substrate.

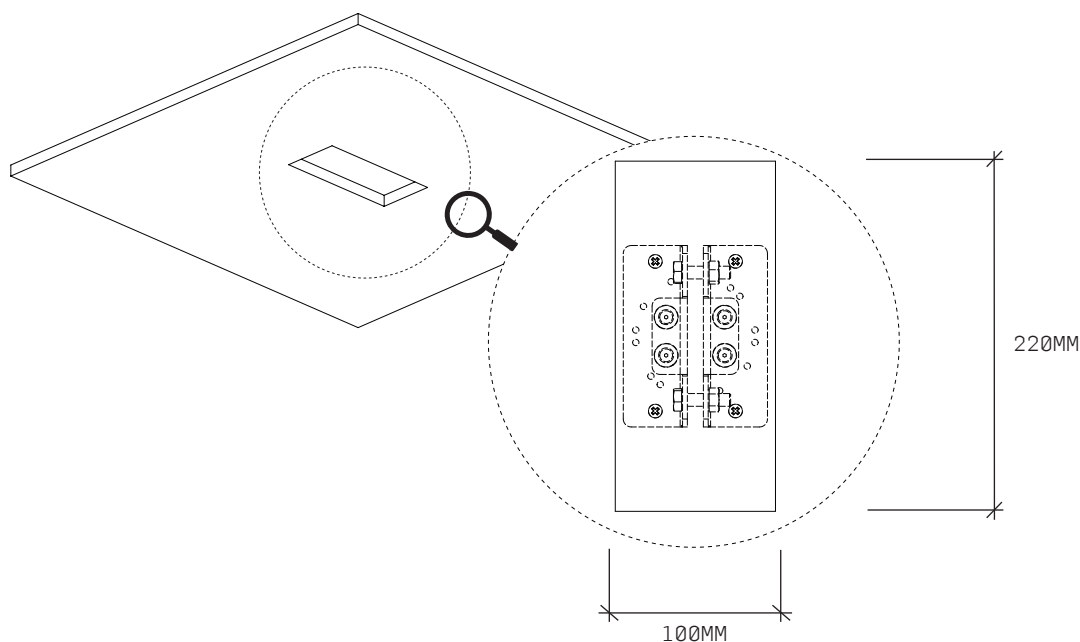


- 3 Installer to provide adequate load-bearing substrate, utilising ceiling joists where additional support is required. The mounting face of the substrate must be set back 40mm from the ceiling facade.

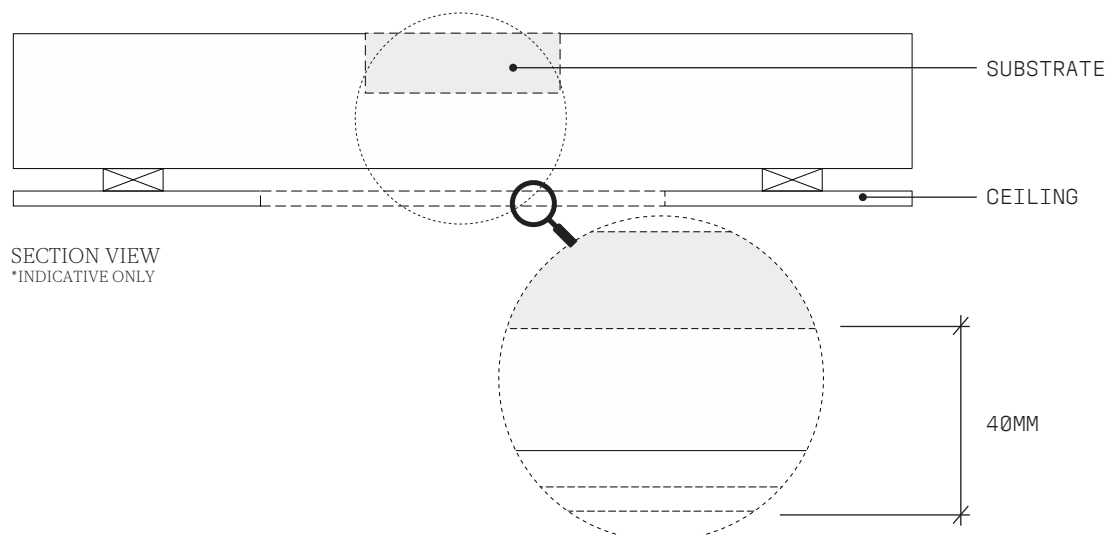


- 4 Prepare the remotely located 12V POWER CABLE for connection to the pendant.

Refer to supplied WIRING DIAGRAM.

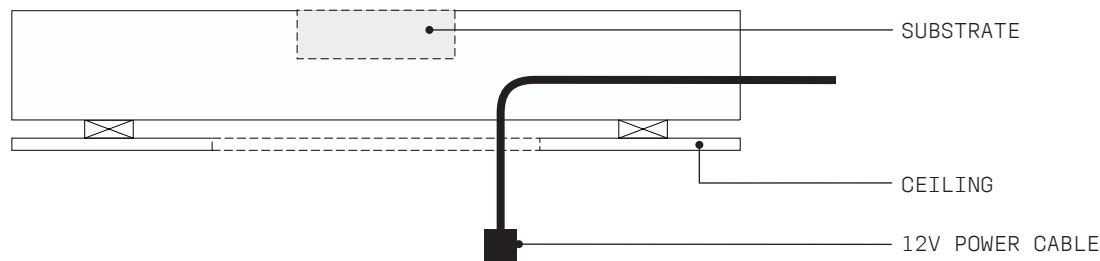

- 5 Attach the U-LINK BRACKETS to the prepared SUBSTRATE via the pilot holes with appropriate SCREW FASTENERS.


Ensure the correct holes on the U-LINK BRACKETS are used. Refer to the template.

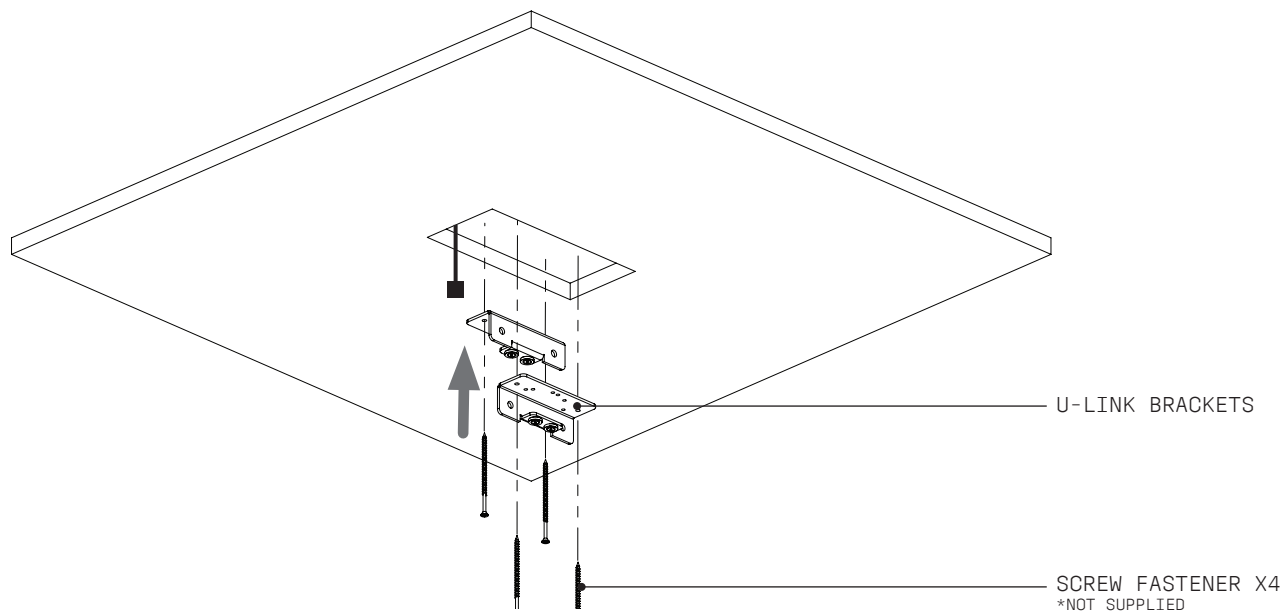

6 Carefully raise the U-LINK through the ESCUTCHEON.

Raise the U-LINK and ESCUTCHEON assembly up to the U-LINK BRACKETS carefully, ensuring the holes are aligned.


Attach and fasten the HEX BOLTS & NUTS, careful not to overtighten or bend the U-LINK BRACKETS.

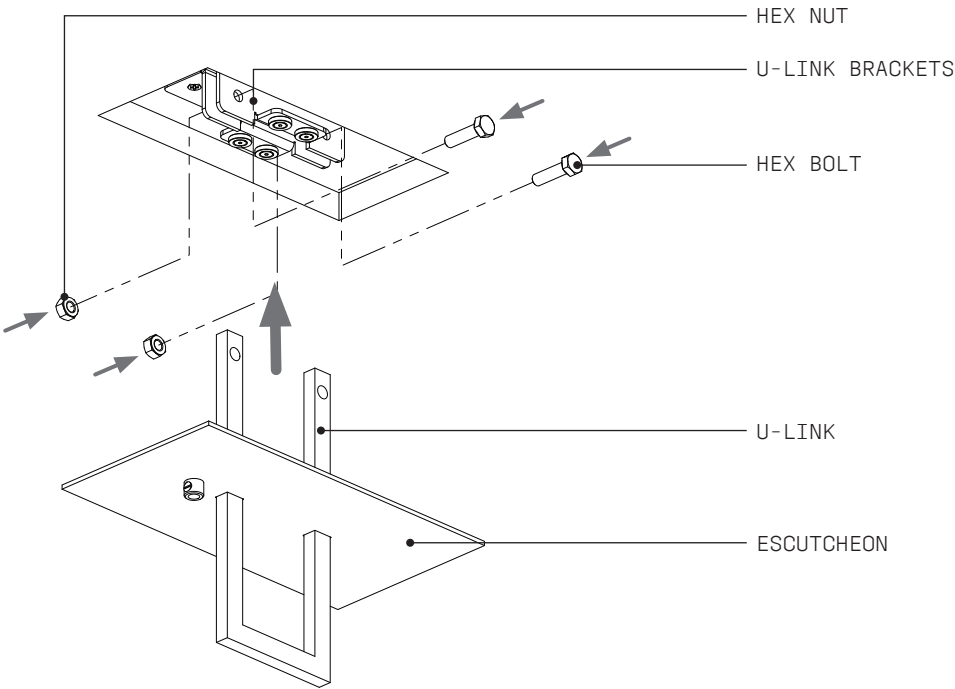


7 From the pendant, feed the POWER CABLE through the CORD GRIP as shown and connect to the prepared 12V POWER CABLE.

Refer to the wiring diagram.


Trim any excess cable.

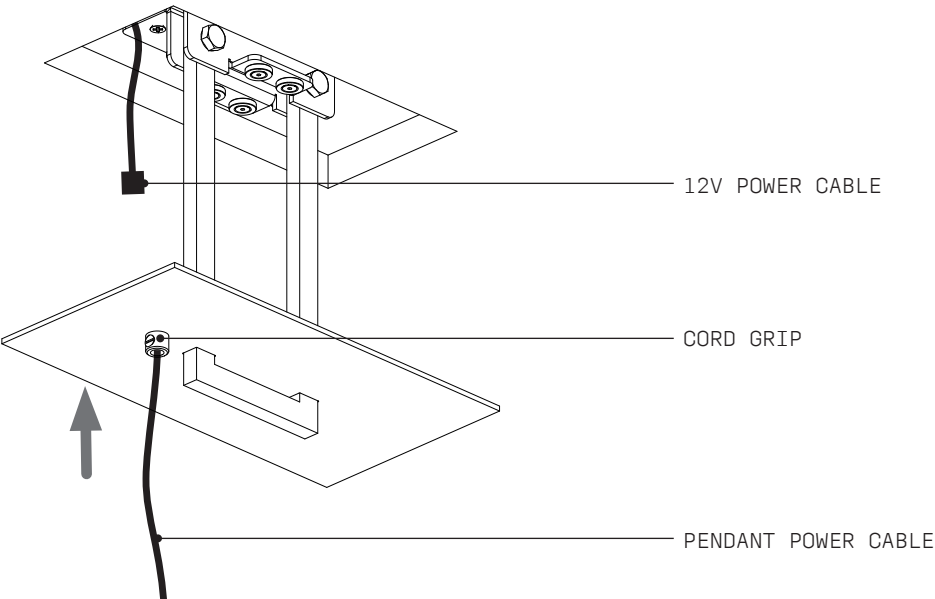

- 8 Carefully raise the ESCUTCHEON toward the U-LINK BRACKETS, until the MAGNETS engage, ensuring not to catch the POWER CABLE.

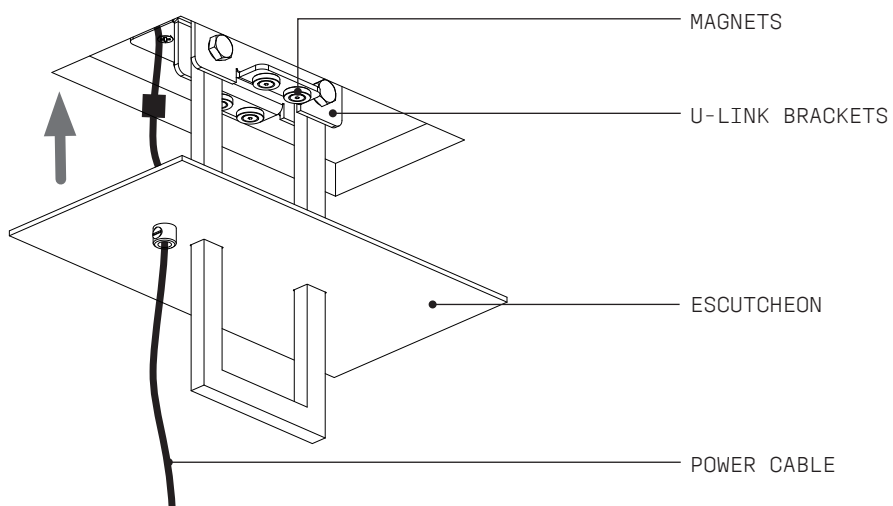


- 9 With the ESCUTCHEON in place, ensure the CORD GRIP is adequately secured on to the POWER CABLE and make any necessary final adjustments to the PENDANT.

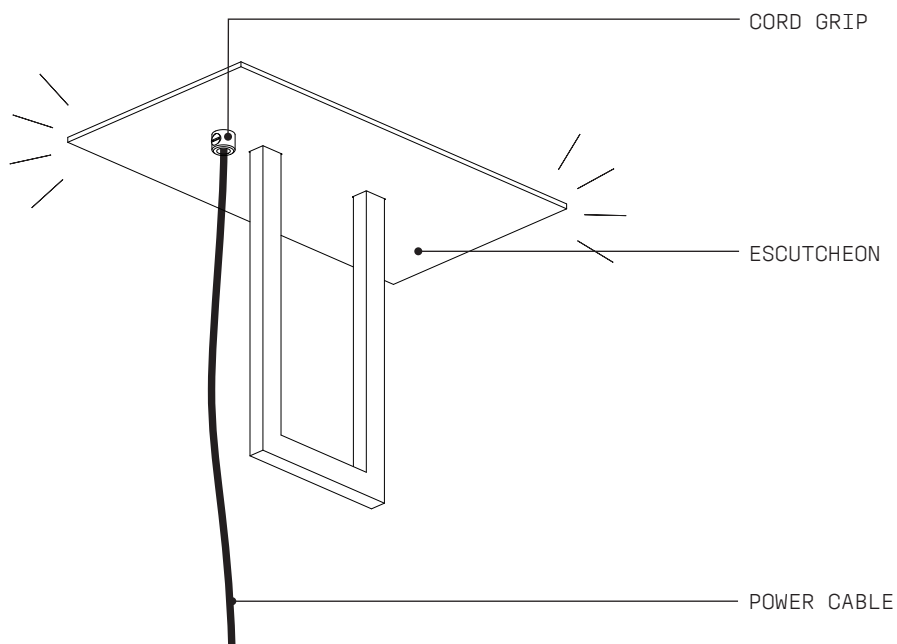

- 10
- Conduct a final visual assessment of both the canopy and fixture to ensure all parts have been properly fitted and secured. Once satisfied that everything is in working order, remove all remaining protective material which will complete the installation process.

FINISH


DRILLING TEMPLATE

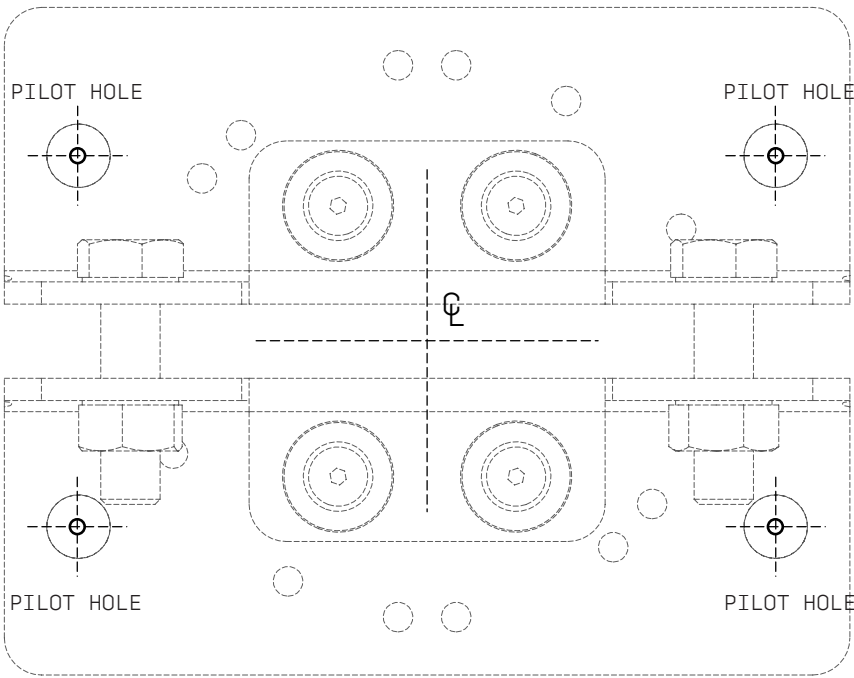

MEASURE BEFORE CUTTING AS TEMPLATE MAY NOT BE TO SCALE

1"
25MM

CHAIN FLUSH LARGE CANOPY

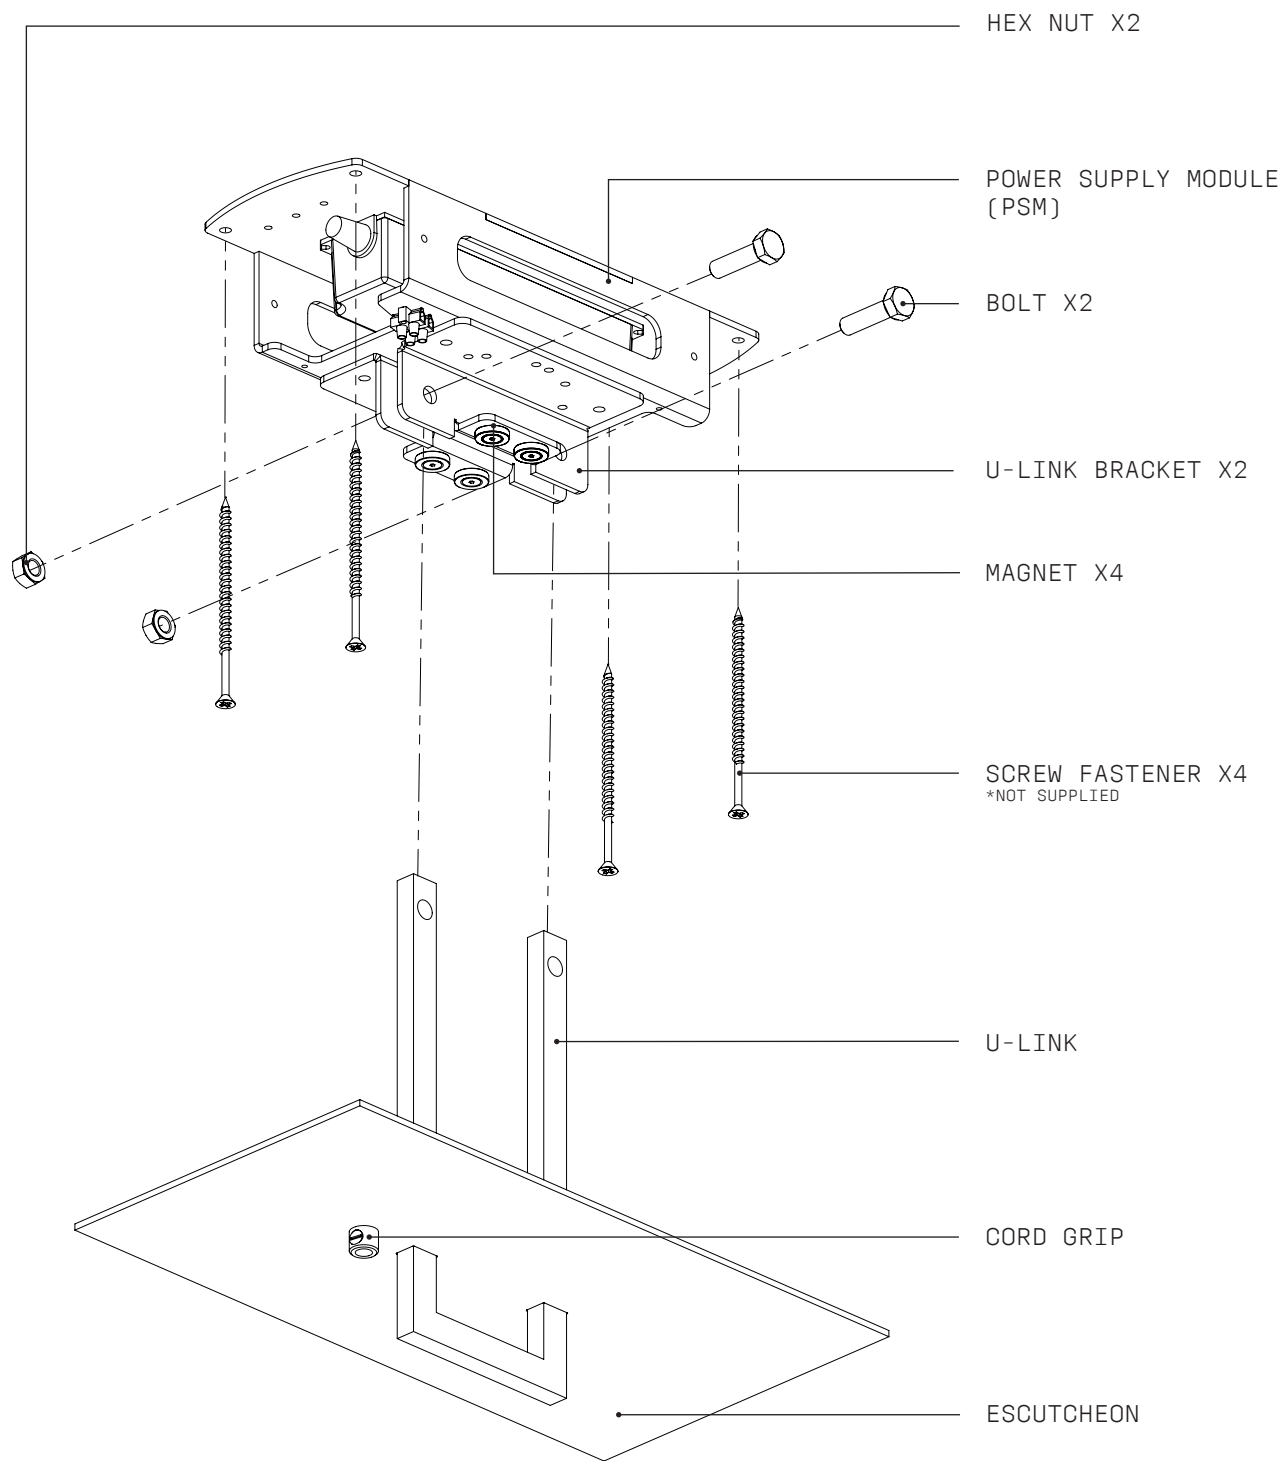


- 1 Wearing gloves, unpack all the components for the FLUSH LARGE CANOPY with care, ensuring not to scratch the surface of the ESCUTCHEON or the U-LINK.




DO NOT REMOVE THE SCRATCH GUARD BEFORE COMPLETION.


- 2 Prepare the ceiling by cutting an opening in the ceiling for the PSM. Refer to illustration below for dimensions.

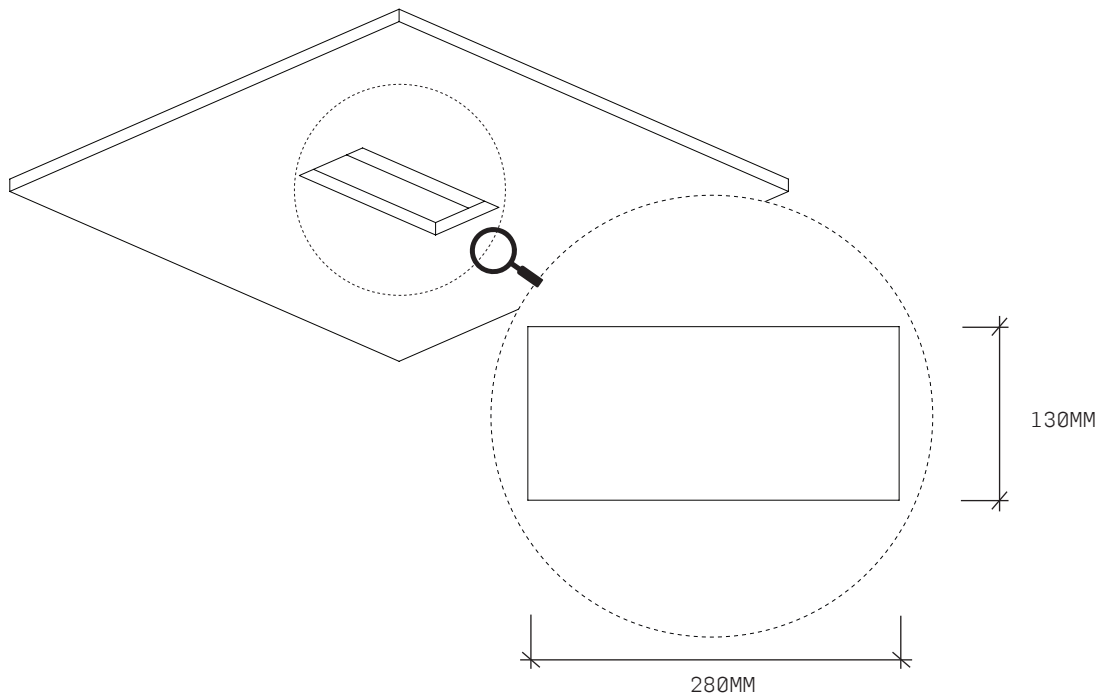


- 3 Installer to provide adequate load-bearing substrate, utilising ceiling joists where additional support is required. The mounting face of the substrate must be set back 90mm from the ceiling. For accurate placement of Cable Exits in the Substrate, use the PSM as a guide.

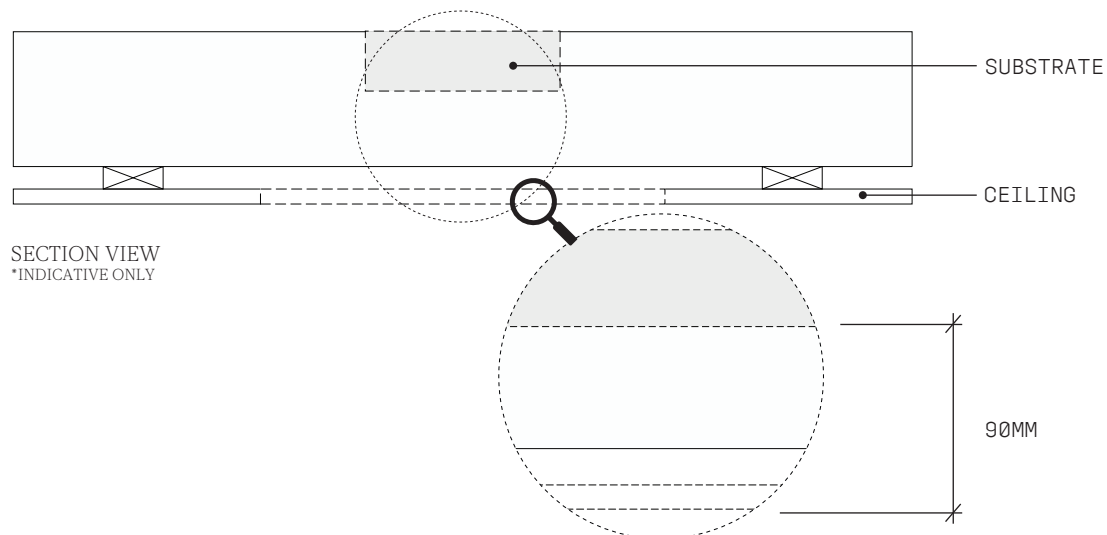


- 4 Prepare the 110-240V AC Power to be connected to the PSM.

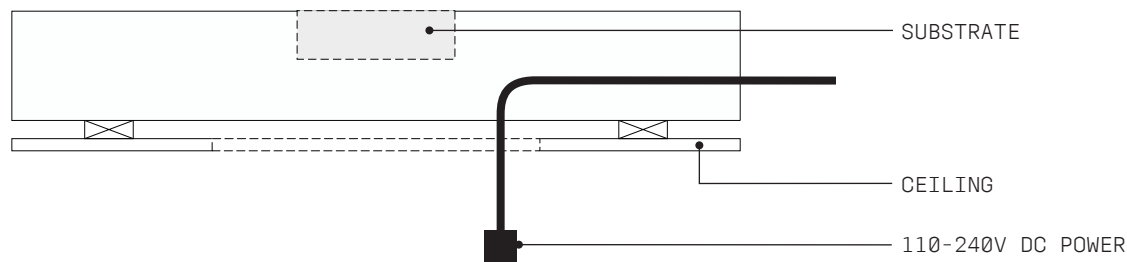

- 5 A. Attach the PSM to Substrate with appropriate Fasteners.
B. Ensure the MAGNETS are flush with the CEILING.
C. Connect the 110-240V AC Power to the PSM TERMINATION POINT.
Refer to supplied WIRING DIAGRAM

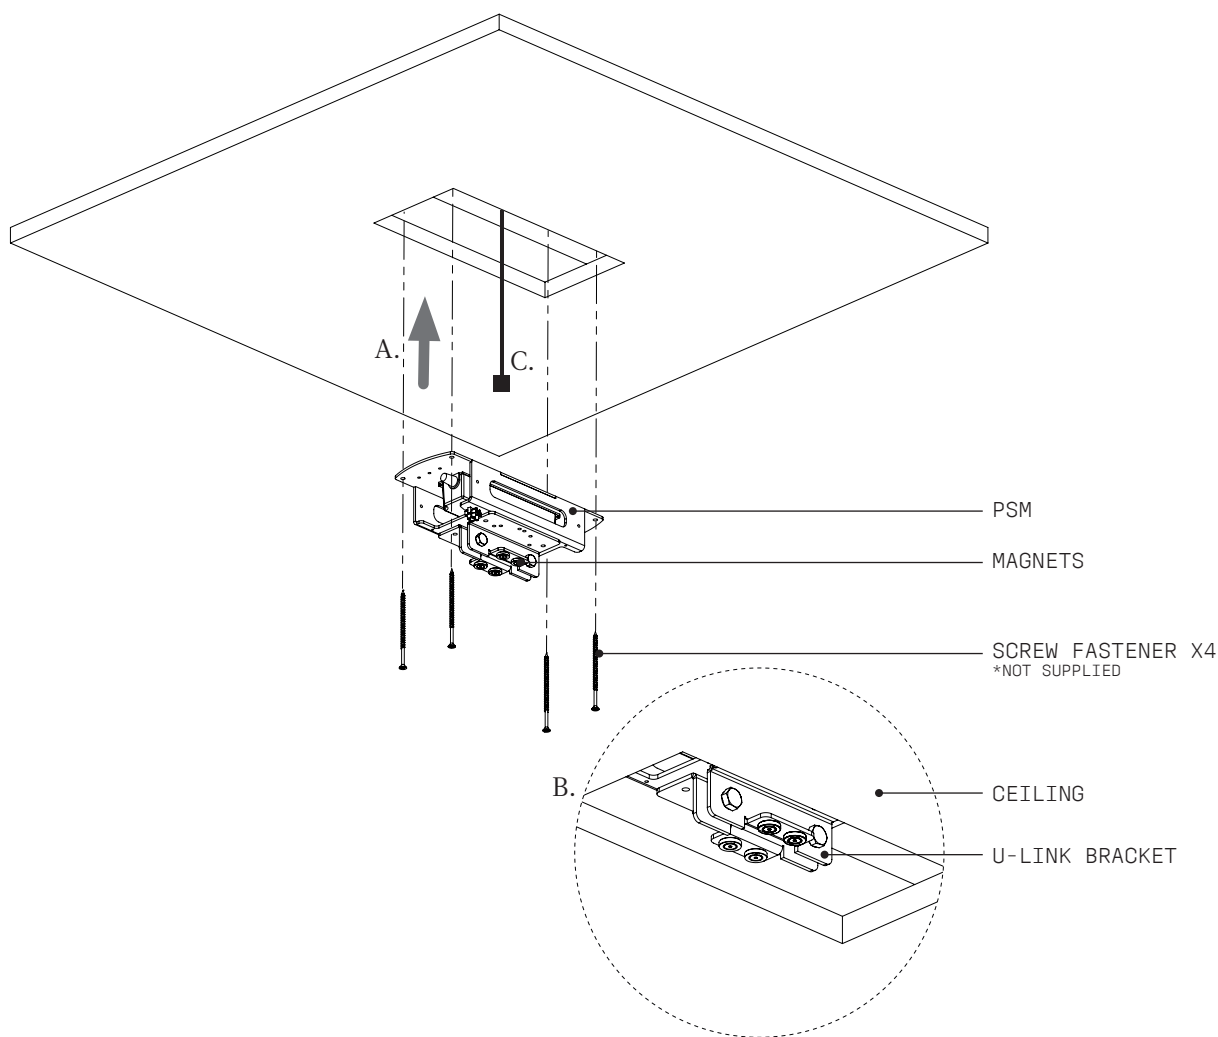


- 6 Remove the M10 NUTS and BOLTS from the U-LINK BRACKET.

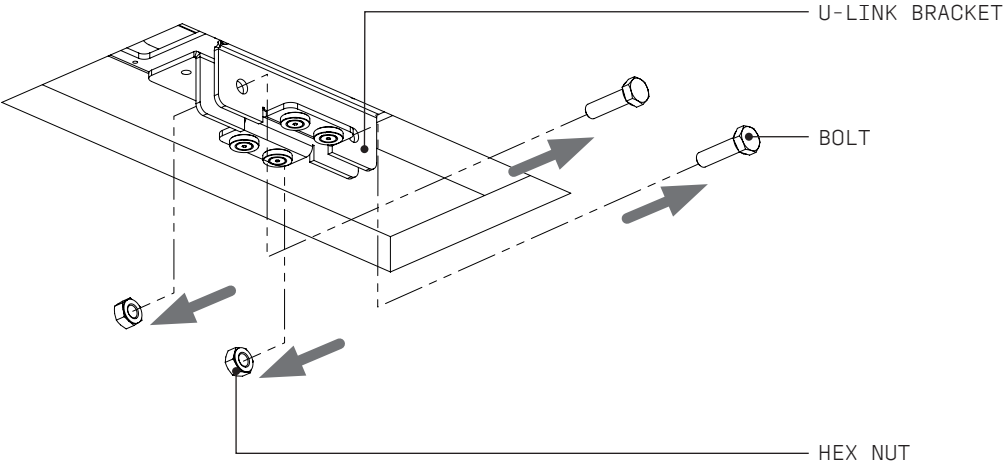

- 7 Carefully raise the U-LINK through the ESCUTCHEON.

Raise the U-LINK and ESCUTCHEON assembly up to the U-LINK BRACKET carefully, ensuring the holes are aligned.


Attach and fasten the HEX BOLTS & NUTS, careful not to overtighten or deform the brackets.

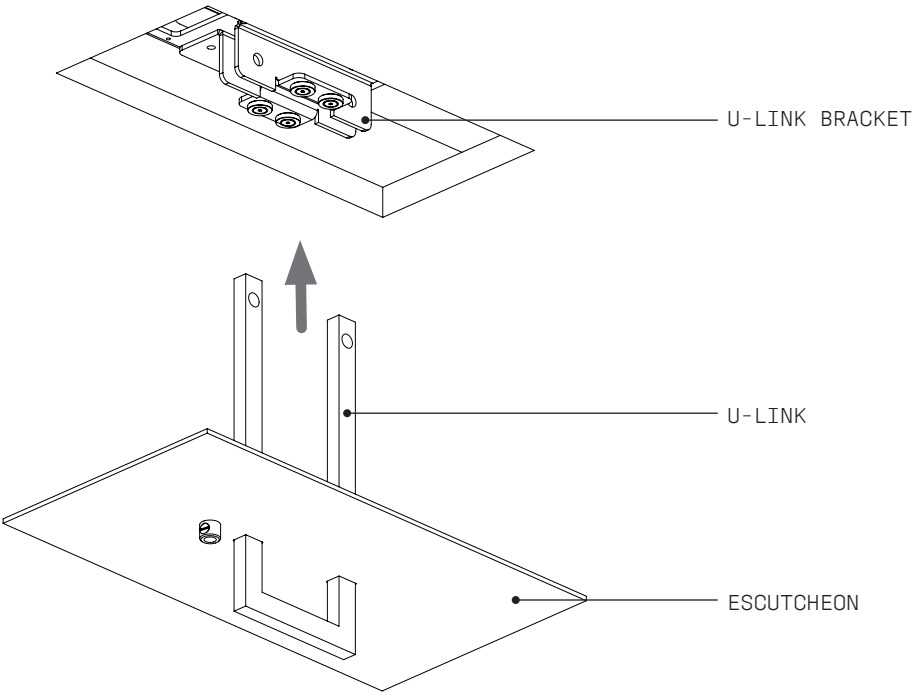


- 8 — Pass the fixture cable through the CORD GRIP in the ESCUTCHEON and connect it to the PSM.
Refer to the supplied wiring diagram




Trim any excess cable.

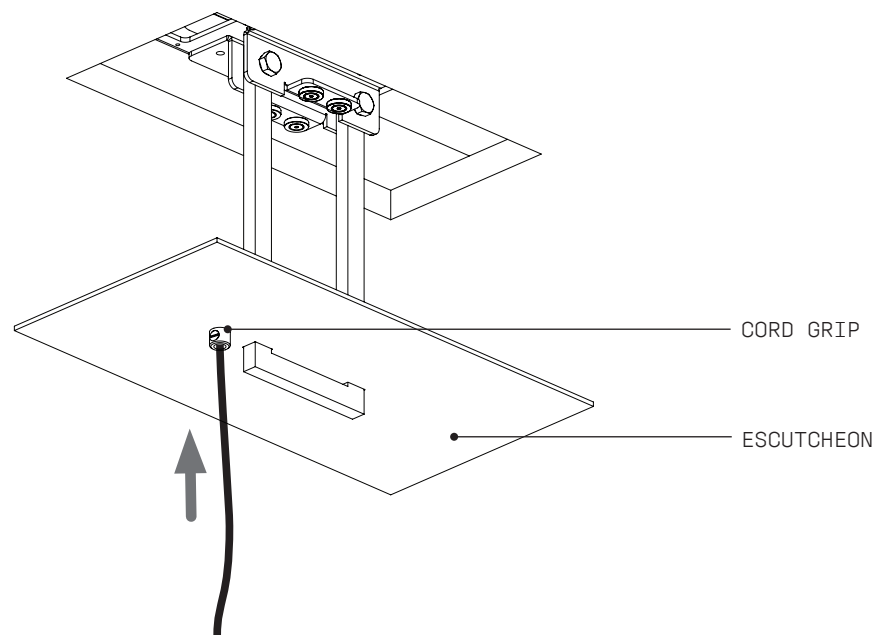

- 9 — Carefully raise the ESCUTCHEON toward the PSM, until the MAGNETS engage, ensuring not to catch the POWER CABLE.

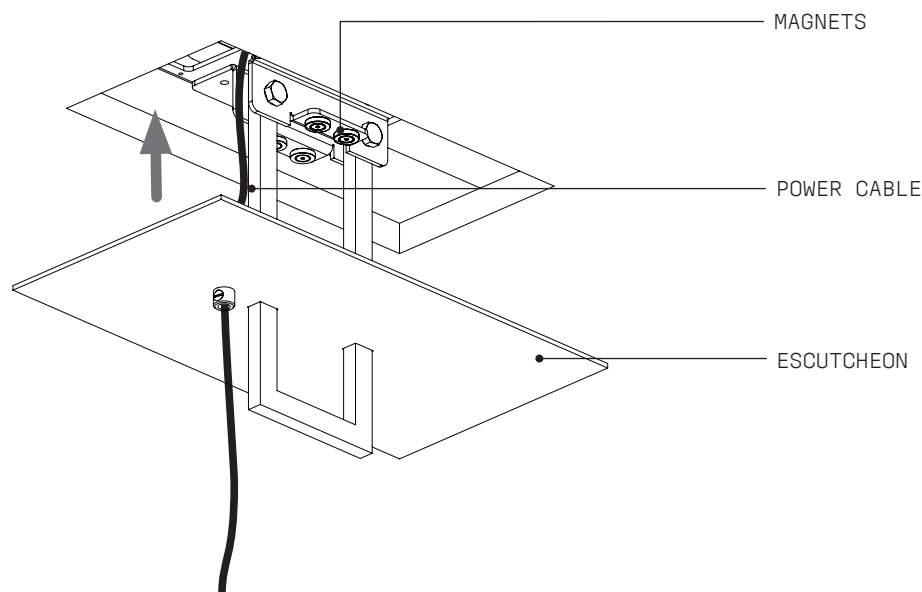


- 10 — With the ESCUTCHEON in place, ensure the CORD GRIP is adequately secured on to the POWER CABLE and make any necessary final adjustments to the PENDANT.

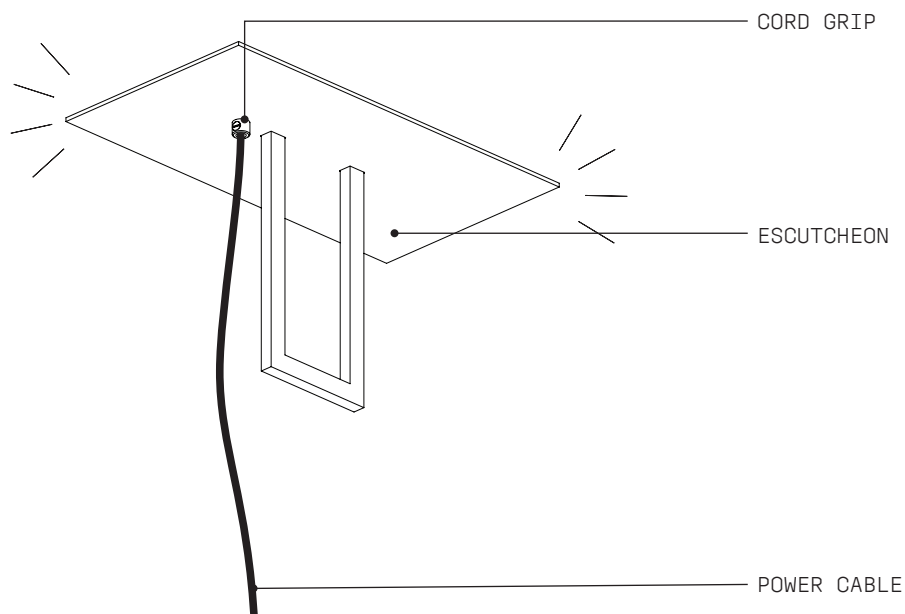

- 11 — Conduct a final visual assessment of both the canopy and fixture to ensure all parts have been properly fitted and secured. Once satisfied that everything is in working order, remove all remaining protective material which will complete the installation process.

FINISH

CHAIN SURFACE CANOPY

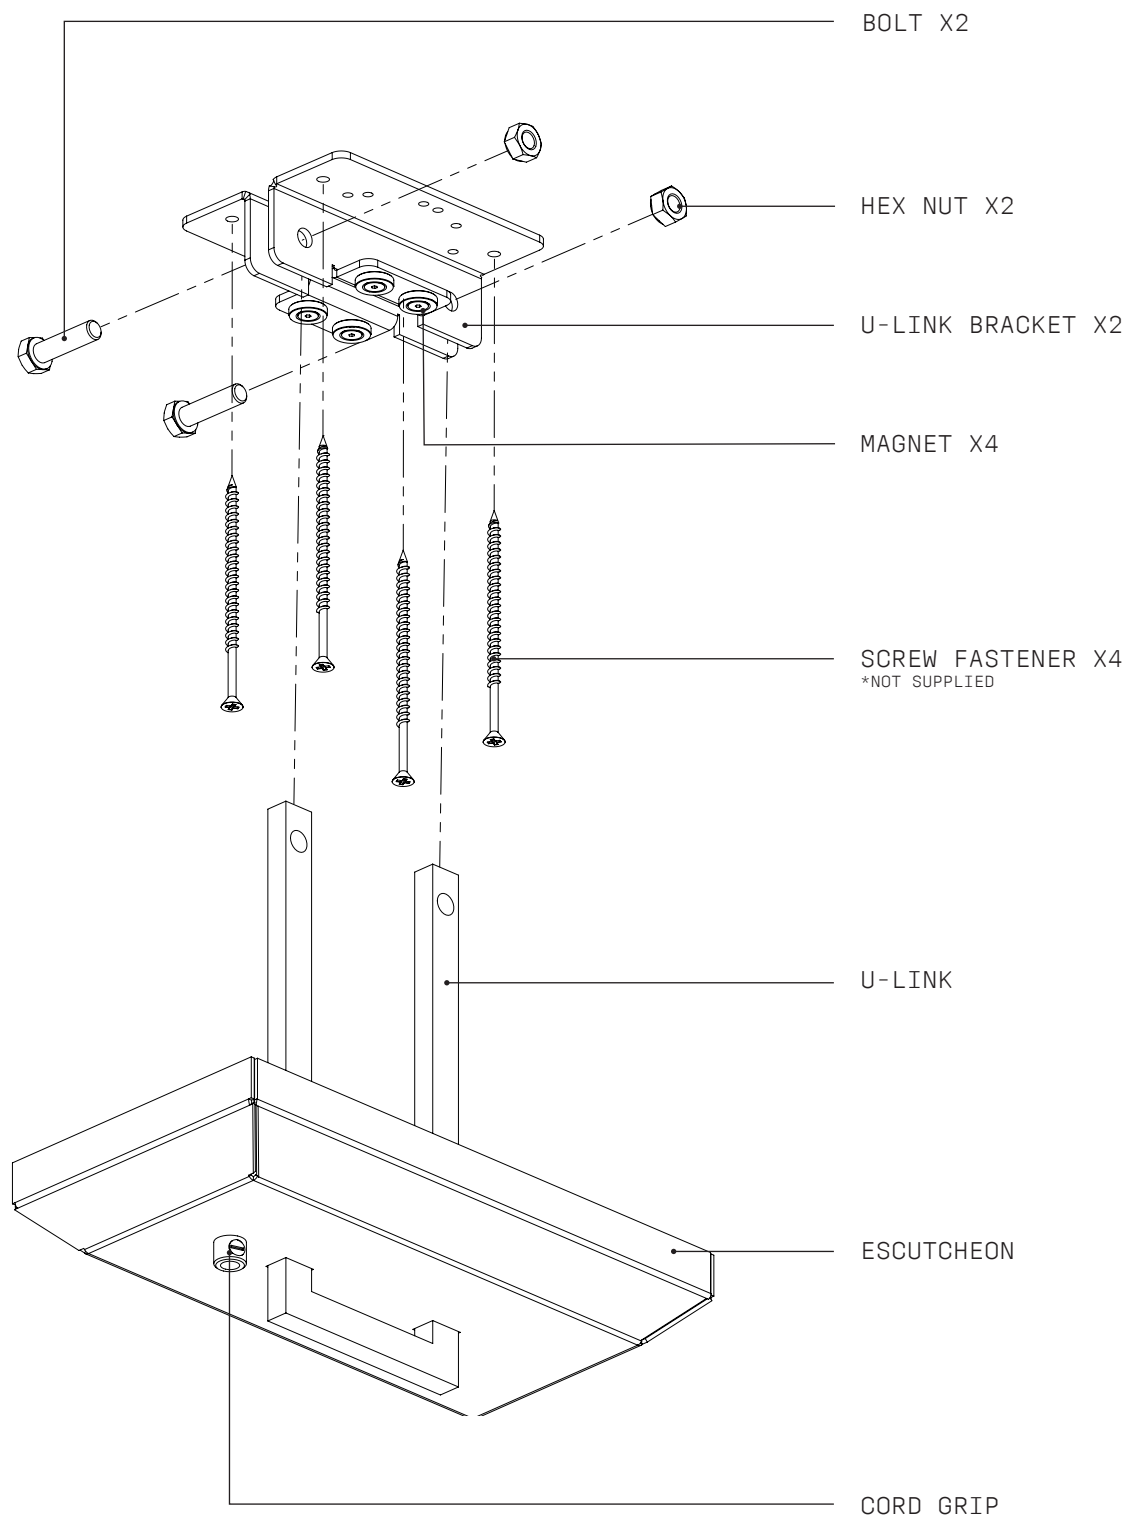


- 1 Wearing gloves, unpack all the components for the CHAIN SURFACE CANOPY with care, ensuring not to scratch the surface of the ESCUTCHEON or the U-LINK.




DO NOT REMOVE THE SCRATCH GUARD BEFORE COMPLETION.

- 2 Use the template, on the last page of this document, to cut a Ø 32mm hole in the ceiling for the power cable, followed by x4 pilot holes.

The hole should be 85mm offset to the centre of the PSM.

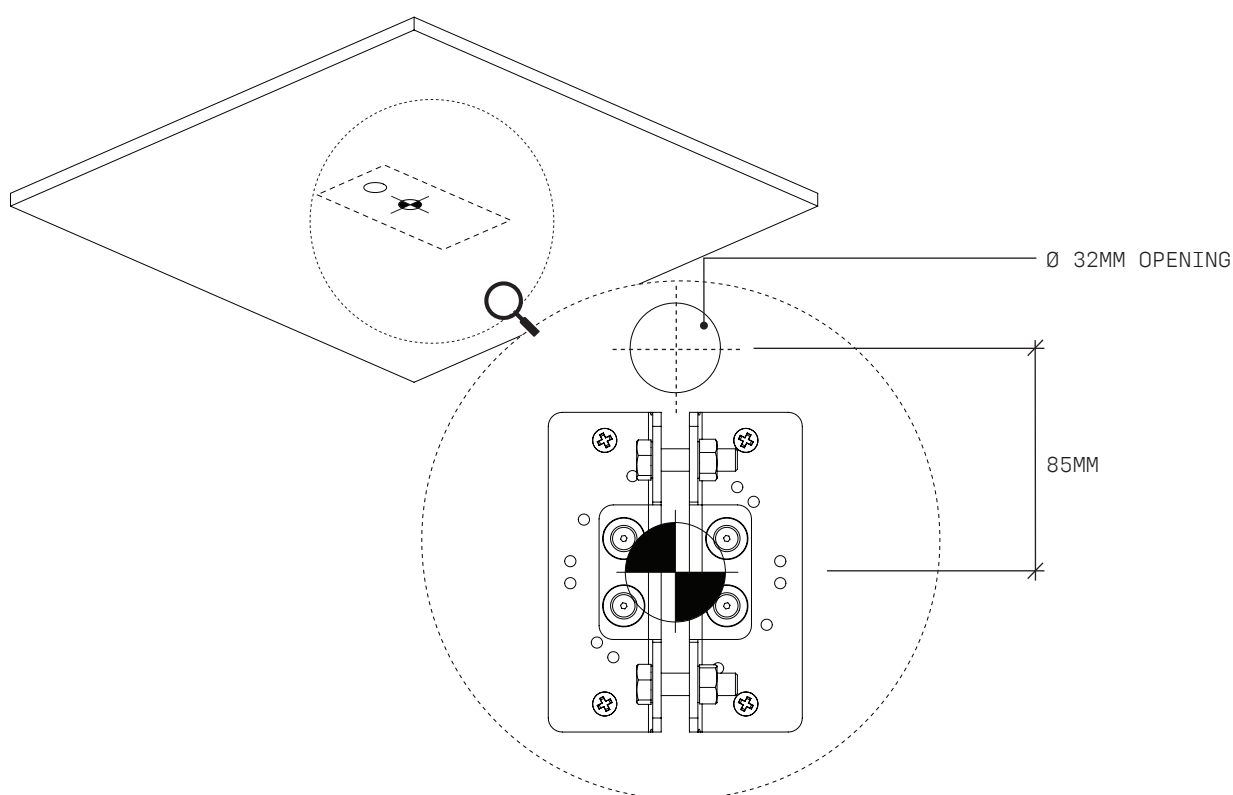


- 3 Installer to provide adequate load-bearing substrate utilising ceiling joist where additional support is required.

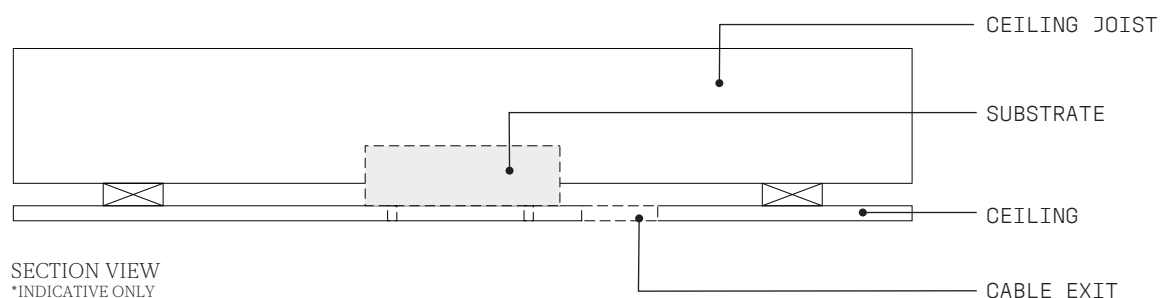


- 4 Prepare the remotely located 12V Power Supply cable for connection to the pendant.

Refer to supplied WIRING DIAGRAM.

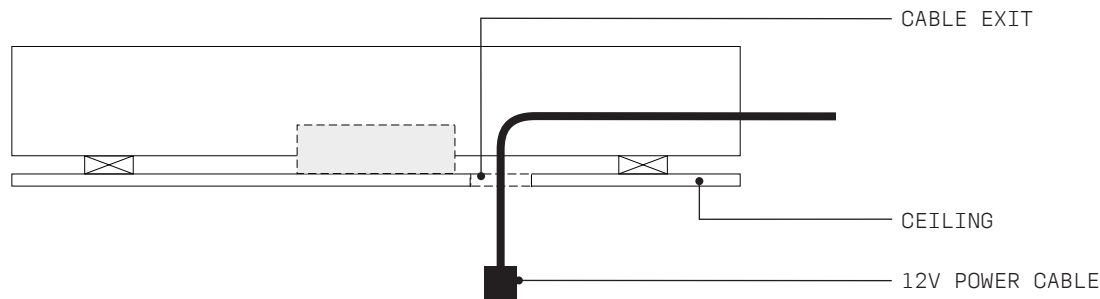

- 5 Attach the U-LINK BRACKETS to the prepared Substrate via the pilot holes with appropriate SCREW FASTENERS.


Ensure the correct holes on the U-LINK BRACKETS are used. Refer to the template.

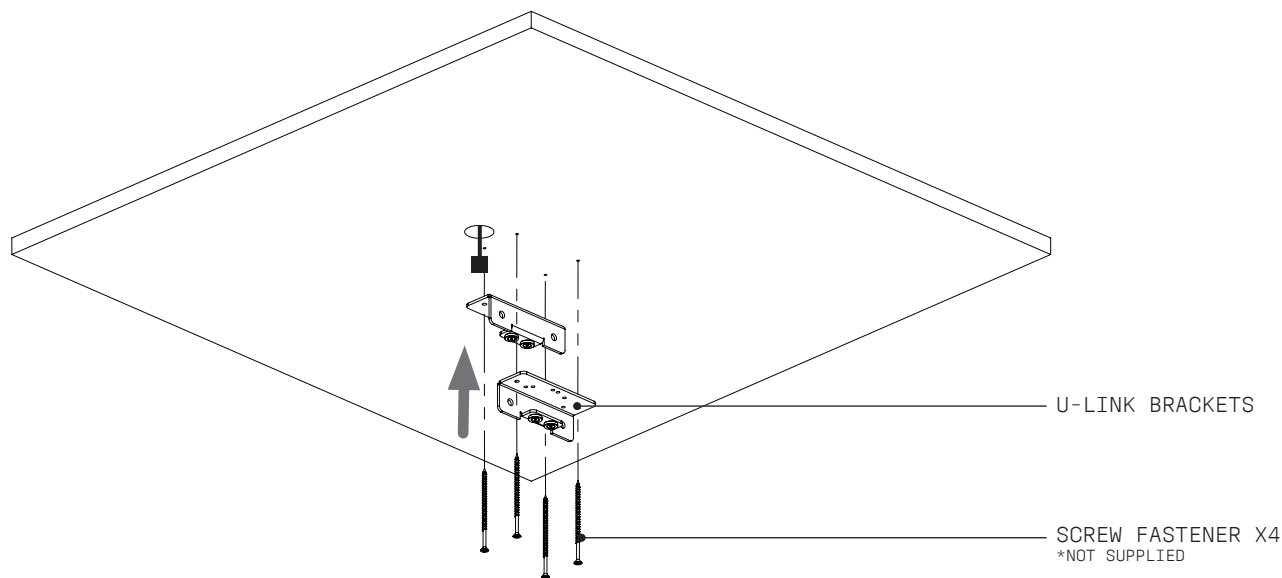

6 Carefully raise the U-LINK through the ESCUTCHEON.

Raise the U-LINK and ESCUTCHEON assembly up to the U-LINK BRACKETS and carefully position in between the U-LINK BRACKETS, ensuring the holes are aligned.


Attach and fasten the HEX BOLTS & NUTS, careful not to overtighten or deform the brackets.

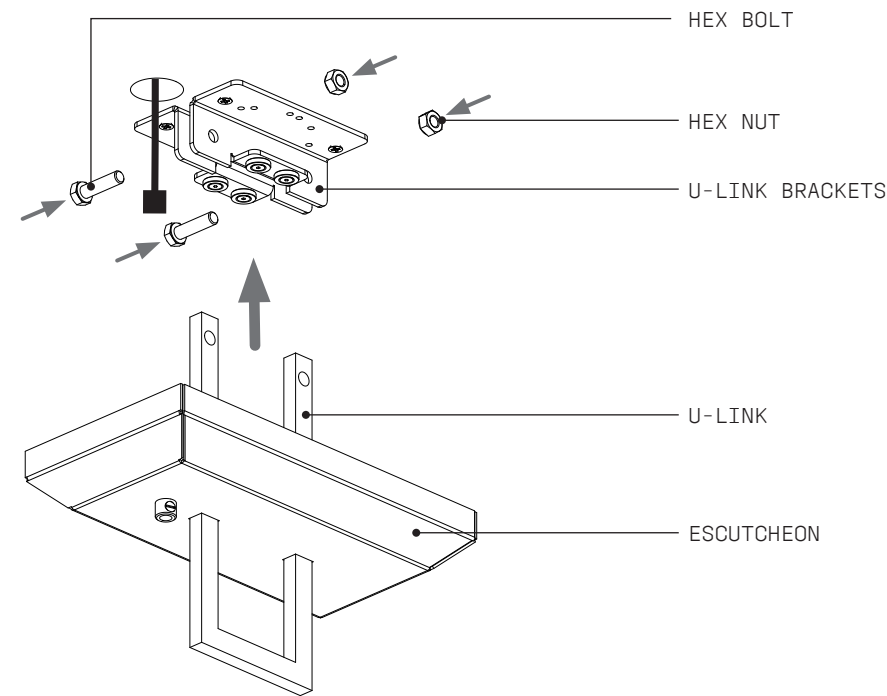


7 From the pendant, feed the POWER CABLE through the CORD GRIP as shown and connect to the prepared 12V POWER CABLE.

Refer to the wiring diagram.


Trim any excess cable.

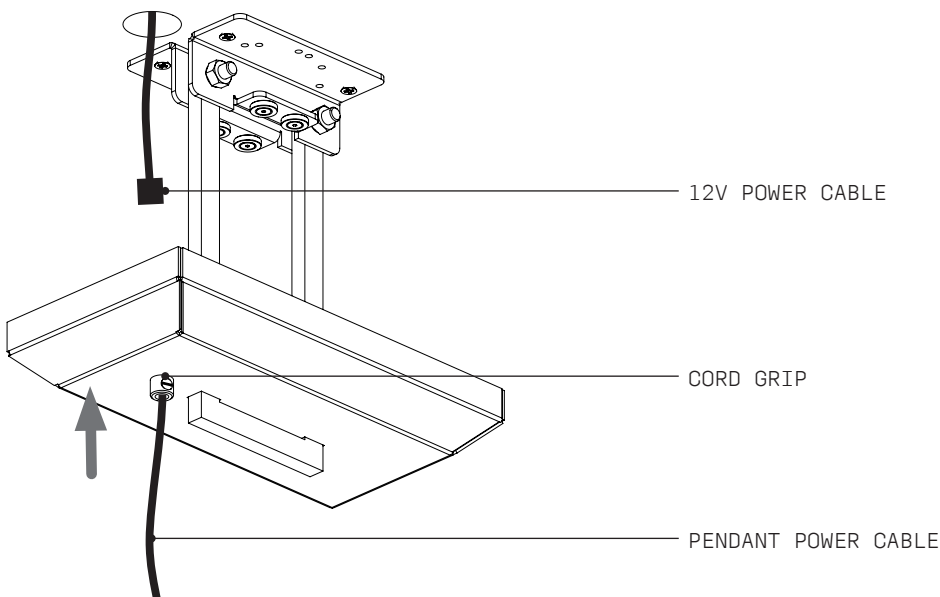

- 8 — Carefully raise the ESCUTCHEON toward the U-LINK BRACKETS, until the MAGNETS engage, ensuring not to catch the POWER CABLE.

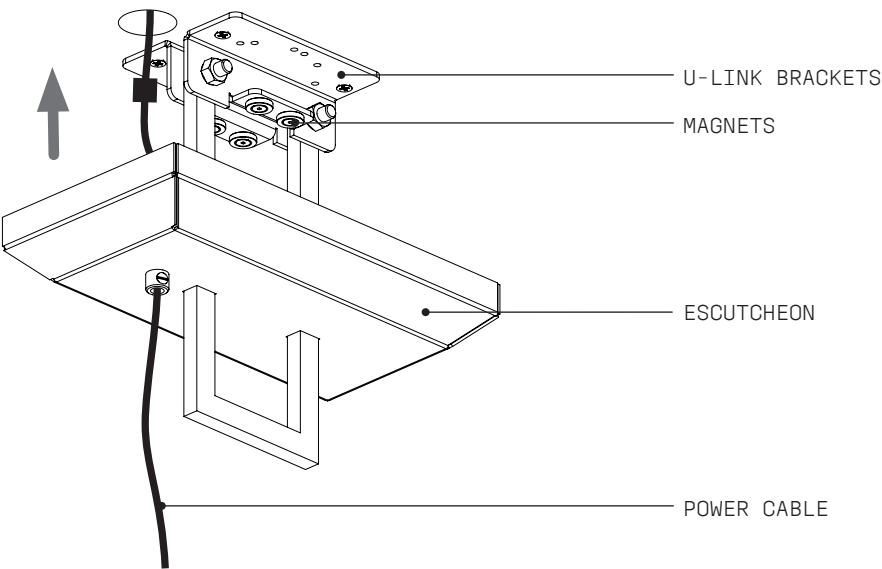


- 9 — With the ESCUTCHEON in place, ensure the CORD GRIP is adequately secured on to the POWER CABLE and make any necessary final adjustments to the PENDANT.

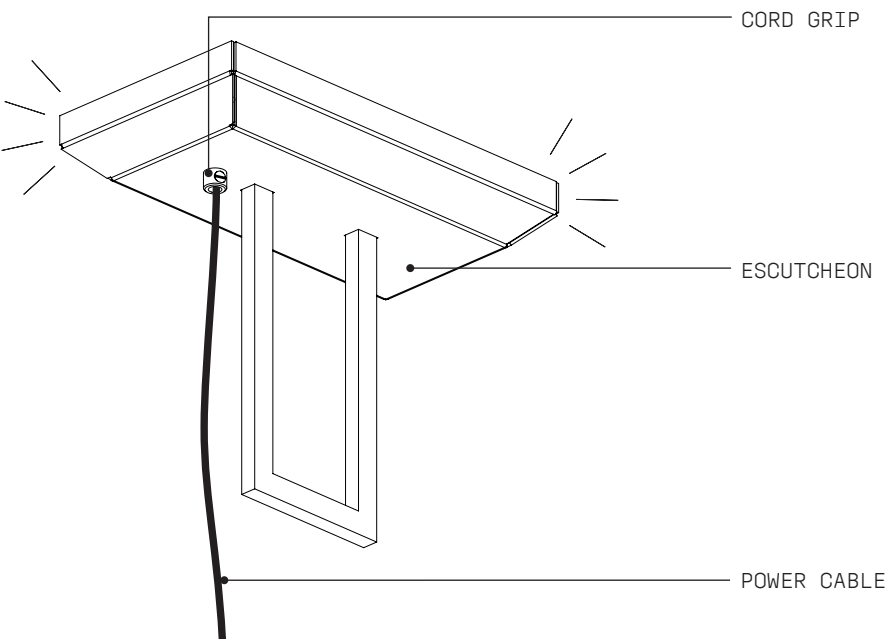

- 10
- Conduct a final visual assessment of both the canopy and fixture to ensure all parts have been properly fitted and secured. Once satisfied that everything is in working order, remove all remaining protective material which will complete the installation process.

FINISH


DRILLING TEMPLATE

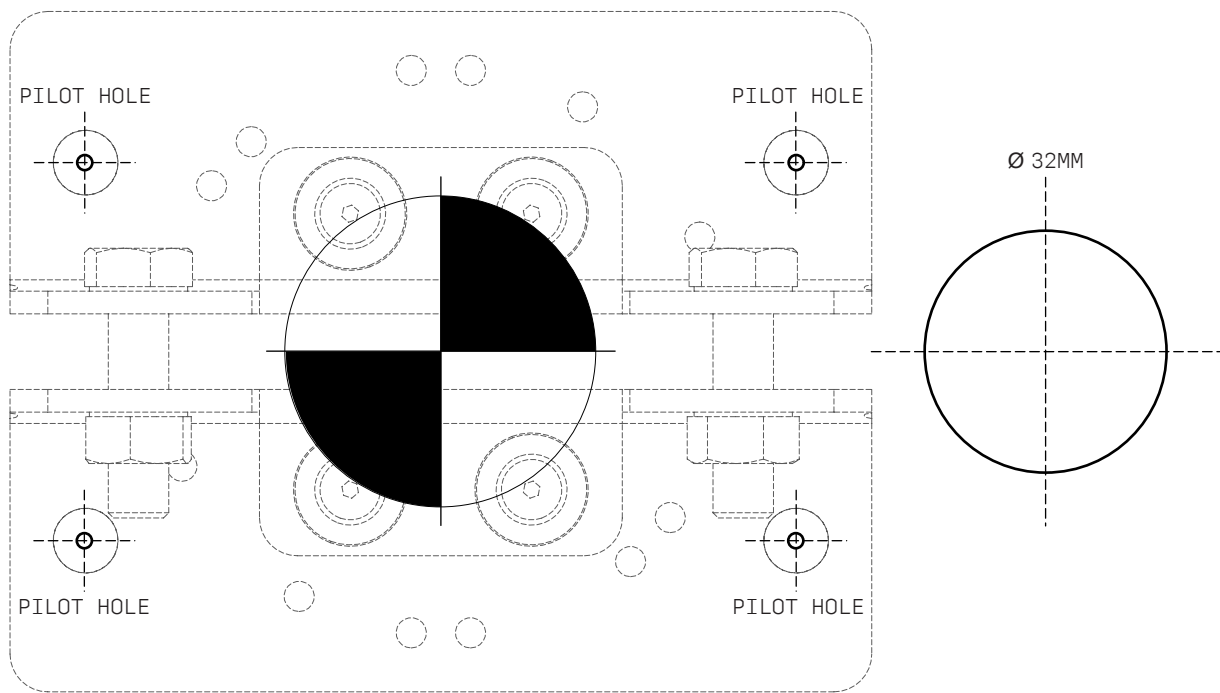

MEASURE BEFORE CUTTING AS TEMPLATE MAY NOT BE TO SCALE



CHAIN SURFACE LARGE CANOPY

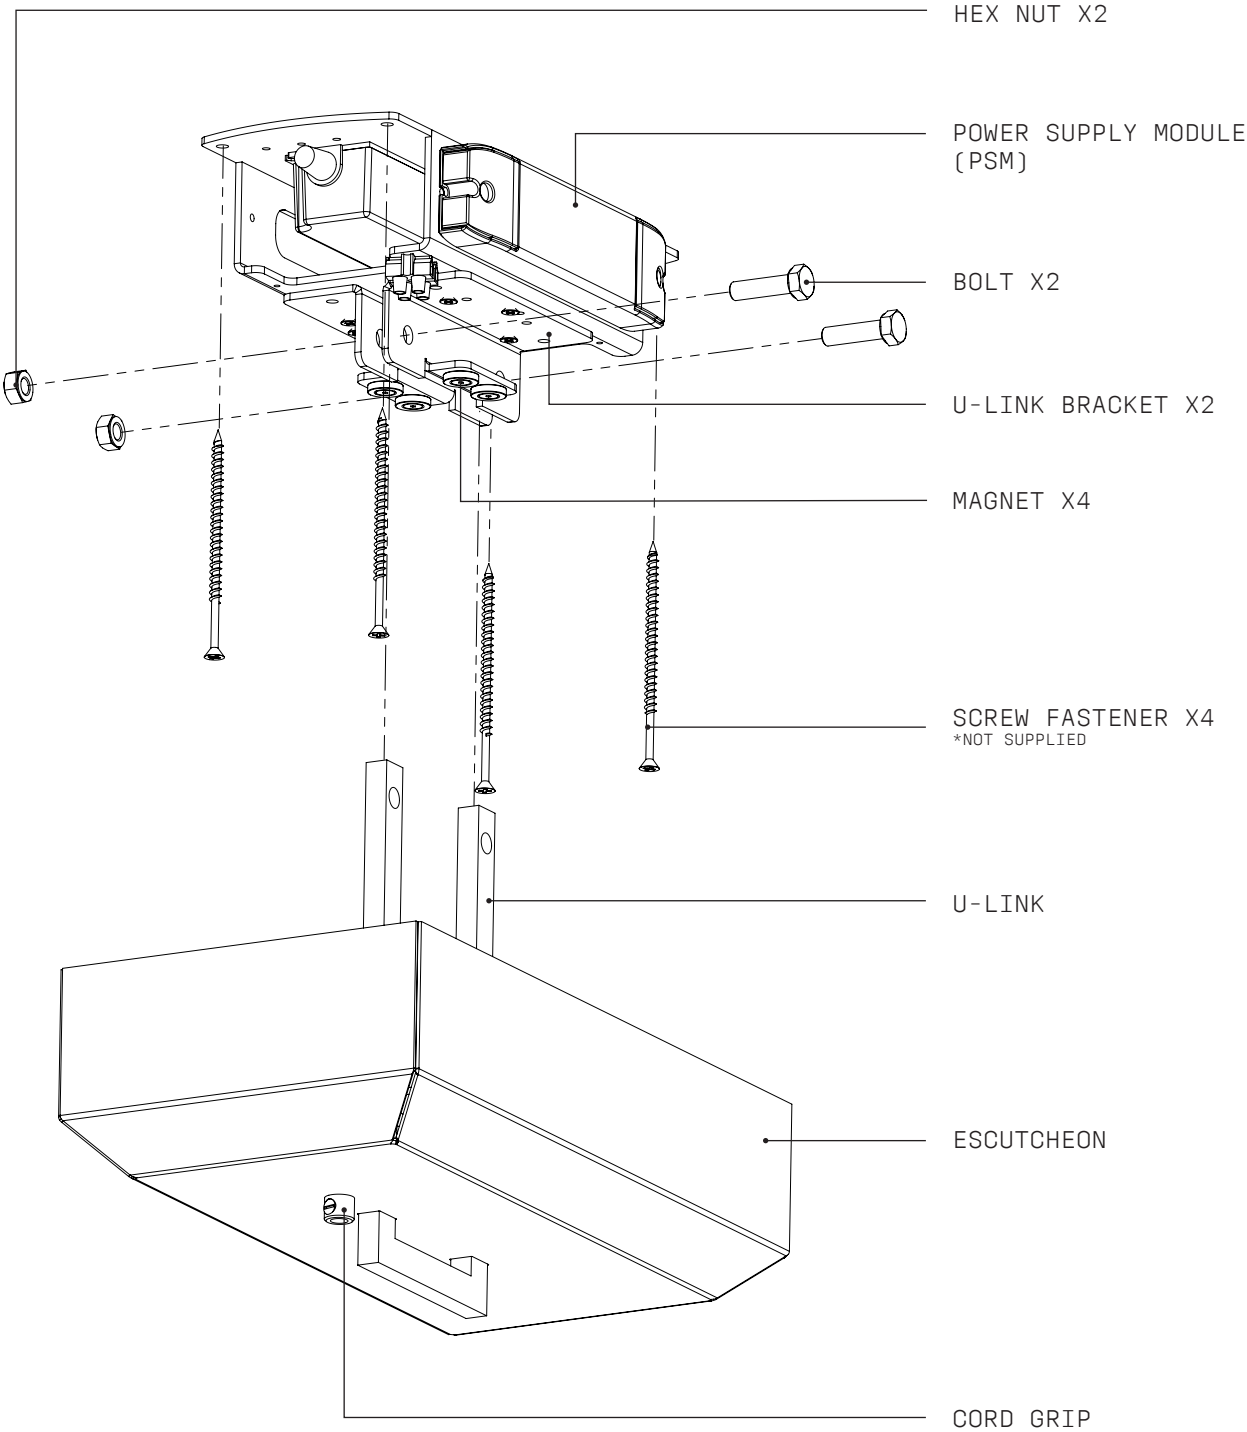


- 1 — Wearing gloves, unpack all the components for the SURFACE LARGE CANOPY with care, ensuring not to scratch the surface of the ESCUTCHEON or the U-LINK.




DO NOT REMOVE THE SCRATCH GUARD BEFORE COMPLETION.


- 2 — Prepare the ceiling by cutting a Ø 32mm hole in the ceiling for the POWER CABLE. Refer to illustration below for dimensions.

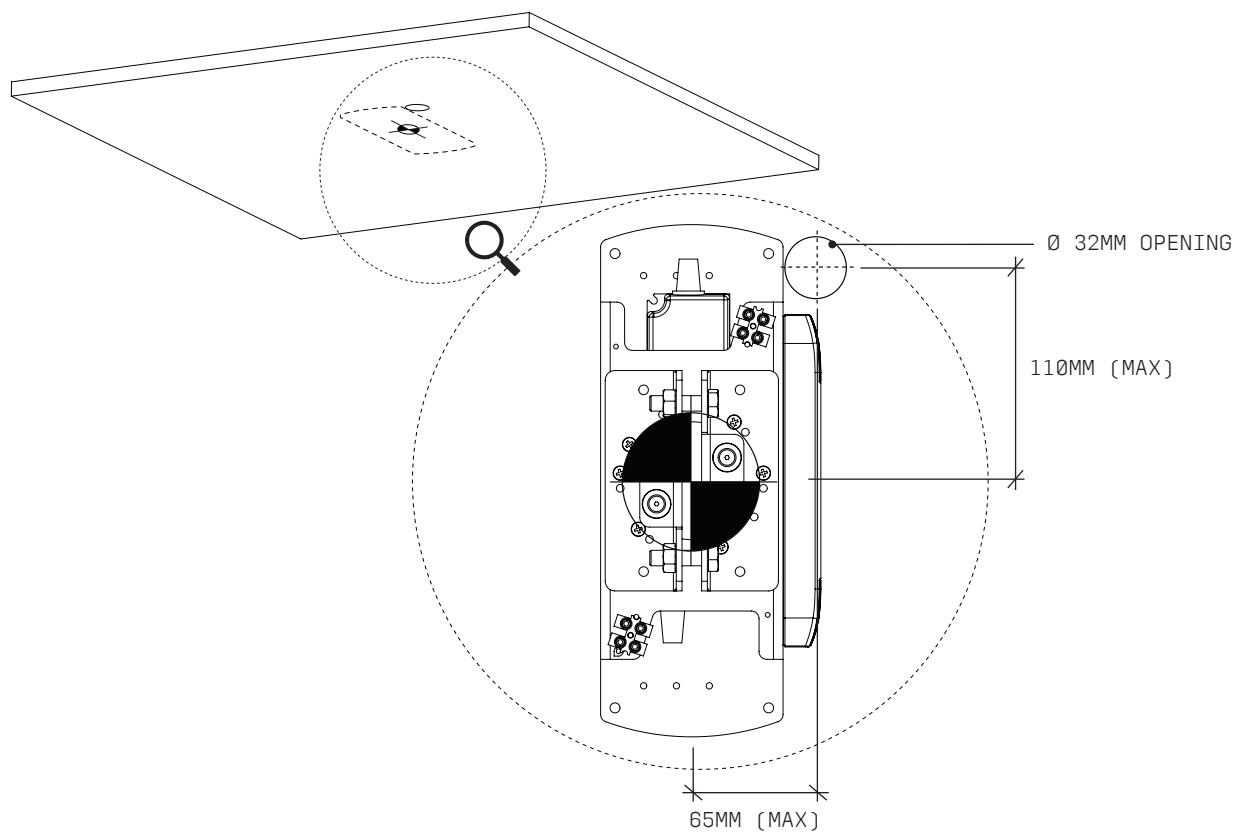


- 3 — Installer to provide adequate load-bearing substrate utilising ceiling joist where additional support is required.

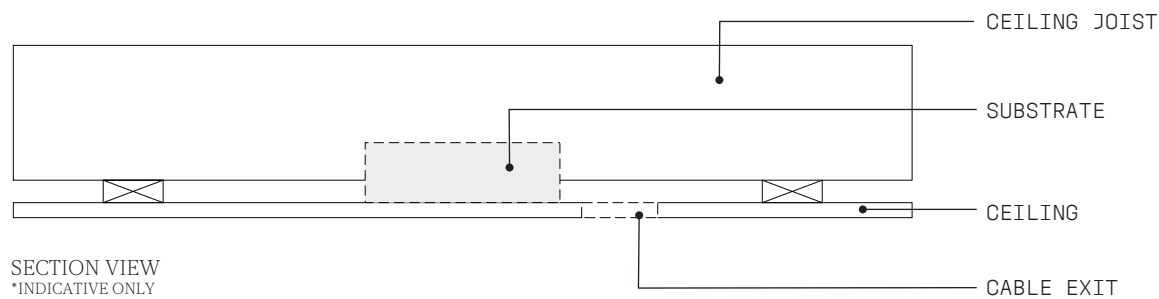


- 4 Prepare the 110-240V AC Power to be connected to the PSM.

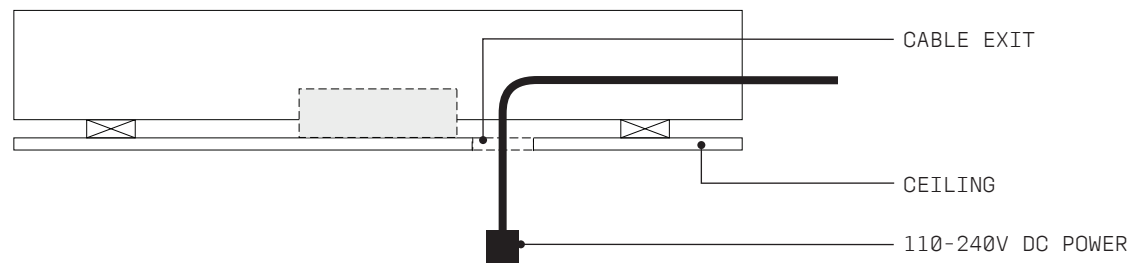

- 5 A. Attach the PSM to the prepared Substrate with appropriate SCREW FASTENERS.
- B. Connect the 110-240V AC Power to the PSU.
Refer to supplied WIRING DIAGRAM

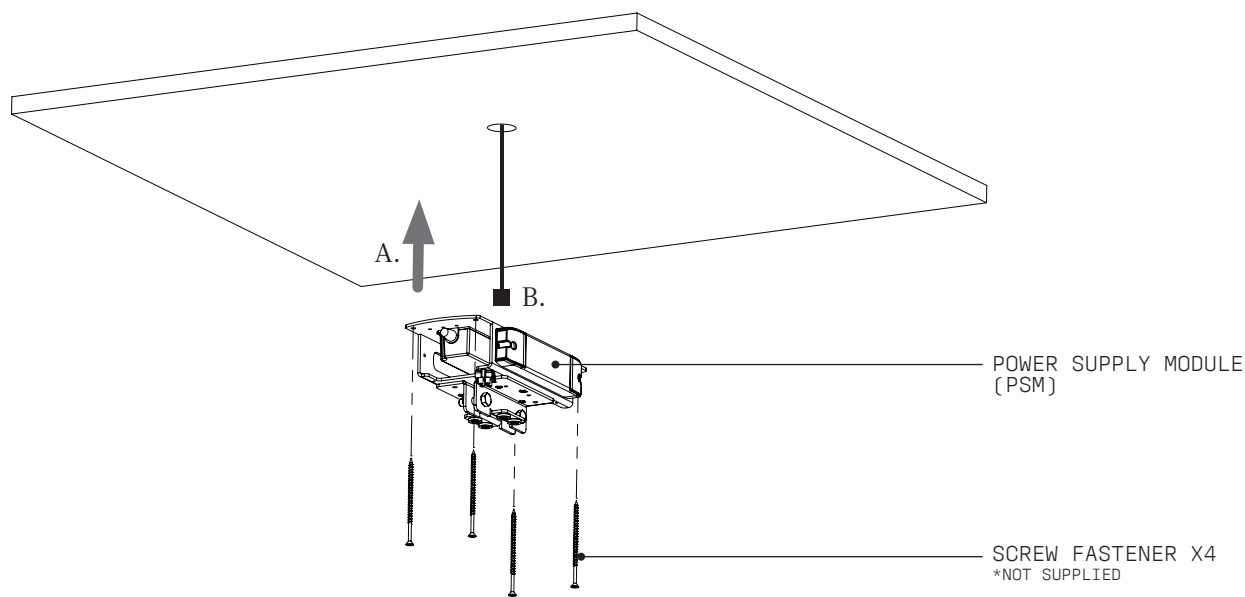


- 6 Remove the HEX NUTS and BOLTS from the U-LINK BRACKET.

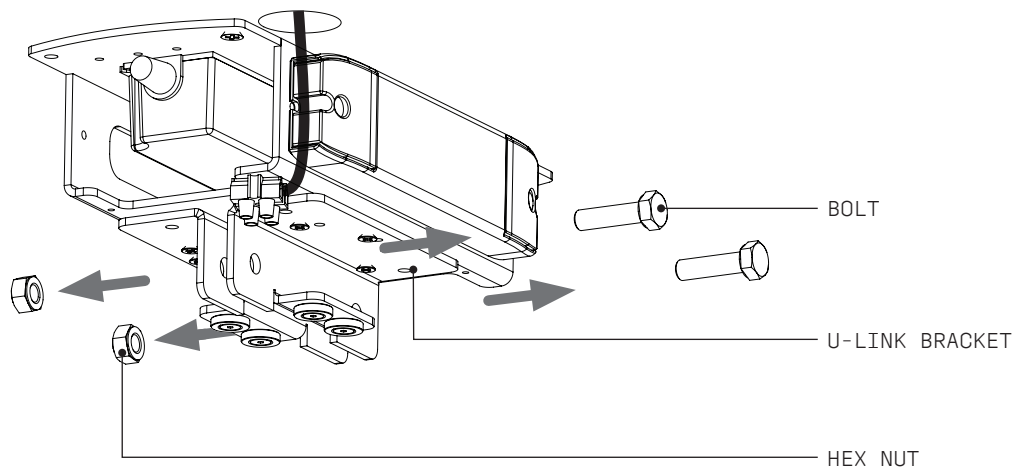

- 7 Carefully raise the U-LINK through the ESCUTCHEON.

Raise the U-LINK and ESCUTCHEON assembly up to the U-LINK BRACKET, ensuring the holes are aligned.


Attach and fasten the M10 BOLT & NUTS, careful not to overtighten or deform the brackets.

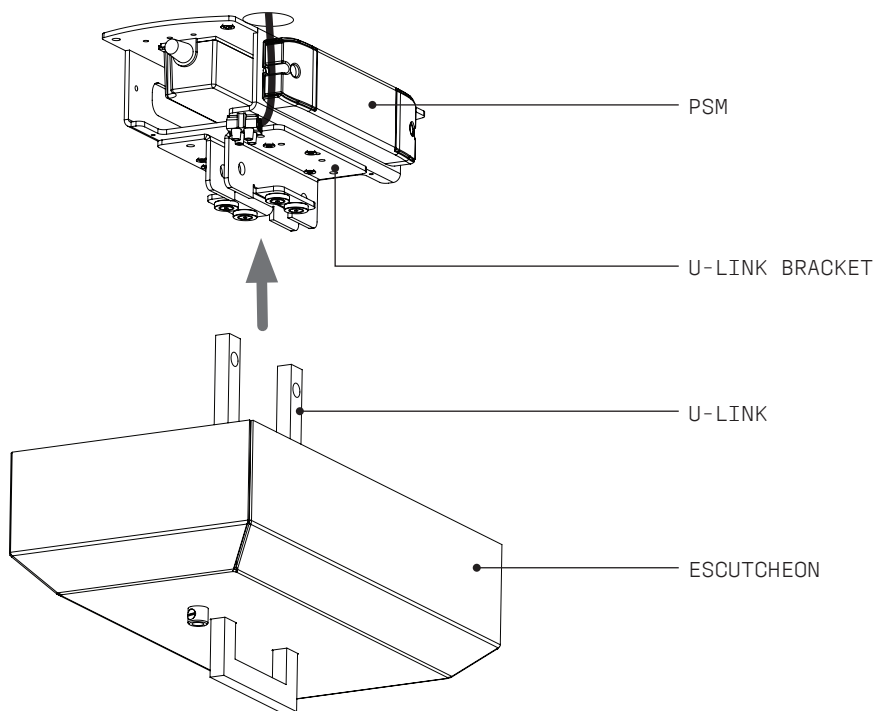


- 8 — Pass the fixture cable through the CORD GRIP in the ESCUTCHEON and connect it to the PSM.
Refer to the supplied wiring diagram




Trim any excess cable.

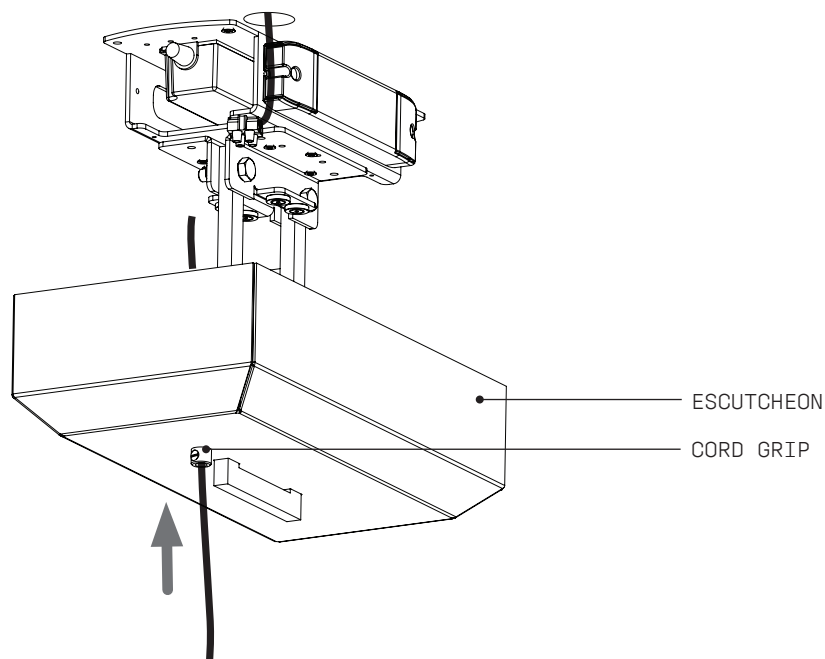

- 9 — Carefully raise the ESCUTCHEON toward the PSM, until the magnets engage, ensuring not to catch the POWER CABLE.

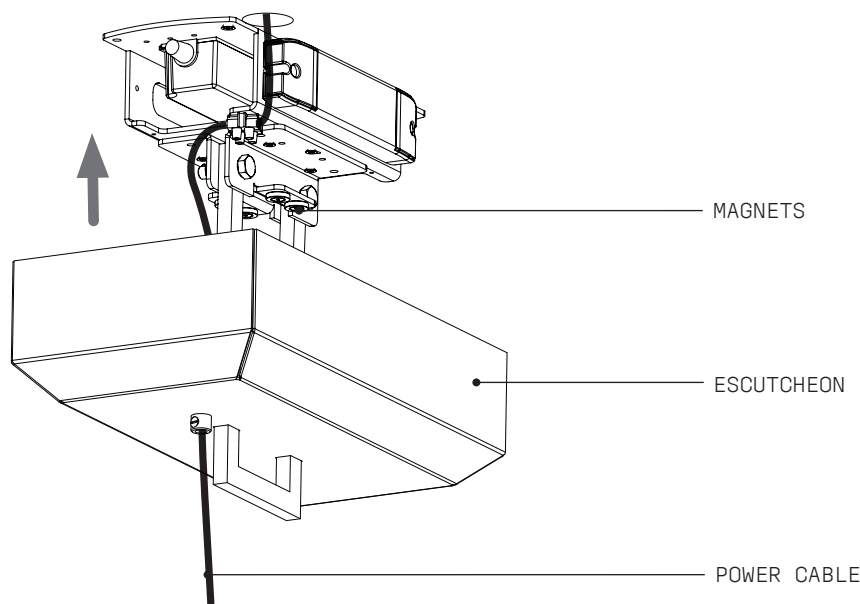

- 10 — With the ESCUTCHEON in place, ensure the CORD GRIP is adequately secured on to the POWER CABLE and make any necessary final adjustments to the PENDANT.

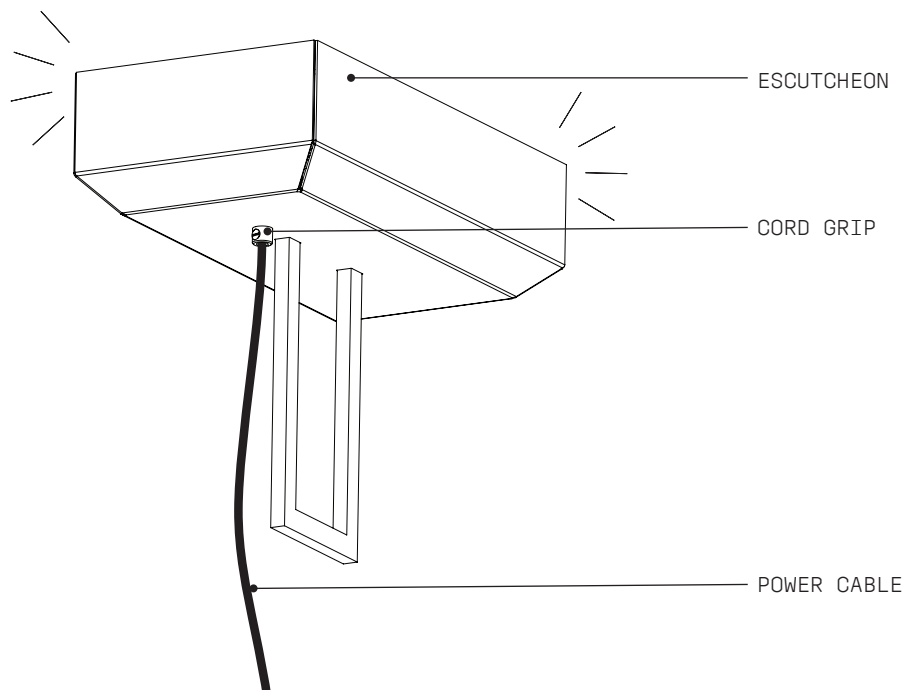

- 11 — Conduct a final visual assessment of both the canopy and fixture to ensure all parts have been properly fitted and secured. Once satisfied that everything is in working order, remove all remaining protective material which will complete the installation process.

FINISH

twentieth

sales@twentieth.net

323.904.1200

www.twentieth.gallery