
Roll & Hill

CONTENTS

Petal Fixture




(x2) 8-32 Screw

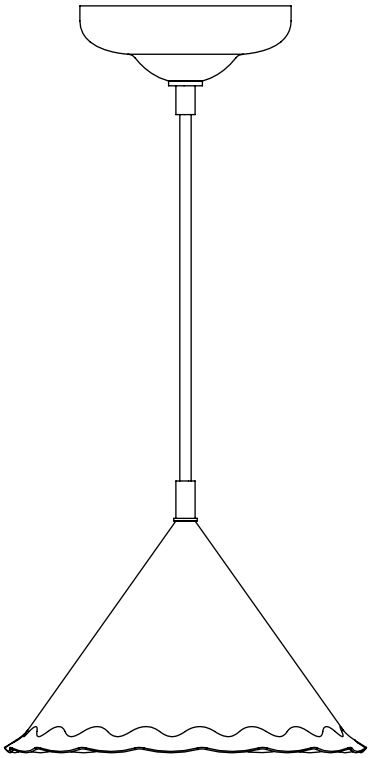


(x7) Wago Connector




Glass diffuser

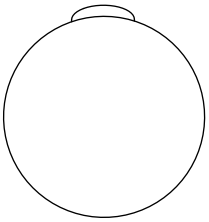


(x1) Driver




(x2) Toggle anchor
On 240V fixtures only



(x2) Wood screw
On 240V fixtures only



(x2) Long 8-32 screw
On 240V fixtures only



(x2) Metal screw
On 240V fixtures only



SAFETY INFORMATION

Suitable for damp locations
Maximum ambient temperature: 25°C

Humboldt Pendant 01| INSTALLATION

Cord length adjustment


Note: Please contact a licensed electrician.

Example fixture only:

To measure length of cord, first determine overall length (OAL), subtract 3" for the canopy height and subtract the fixture height from the OAL.
Fixture height is measured from bottom of the fixture to stem connection point.
The resulting measurement is the final stem length.

Ex. The fixture below has an OAL of 43" and a fixture height of 9".
43" OAL - 3" canopy - 9" fixture height = 31" cord


Note: leave extra 6" cord length to pass through the canopy and make the wire connection.

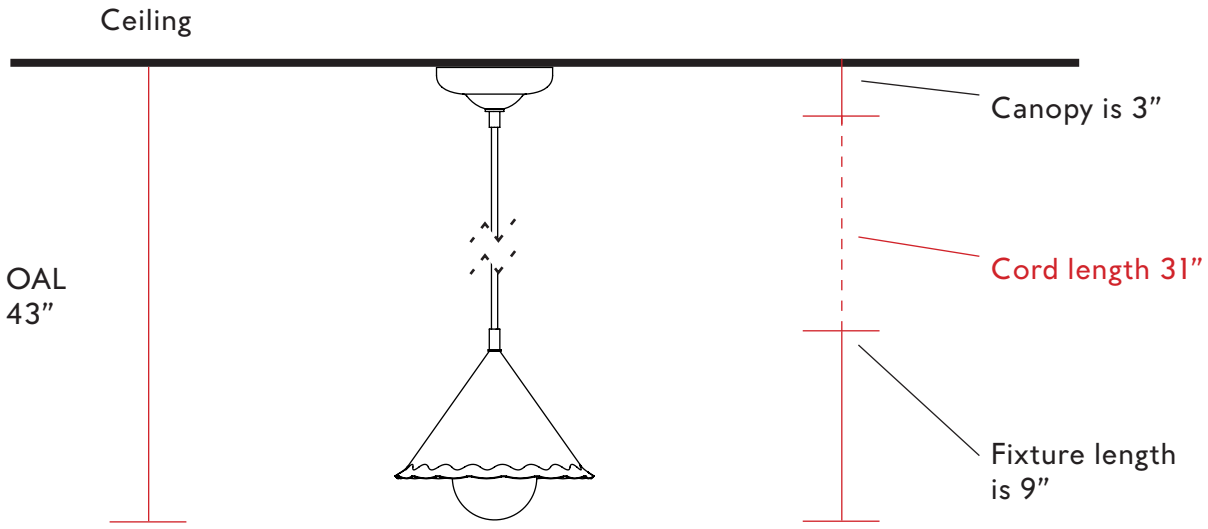

Humboldt Pendant 01| INSTALLATION

Note: Please contact a licensed electrician for installation. Ensure power is off during installation.


01. Unscrew the canopy nut (A) from the canopy (B), to release the crossbar (C), and slide the canopy nut and canopy, down the cord.
02. Adjust the length of the cord to the desired OAL drop, and leave about 6” of cord in the canopy to make the necessary electrical connection. Then tie a knot (D) to prevent the cord from pulling out.

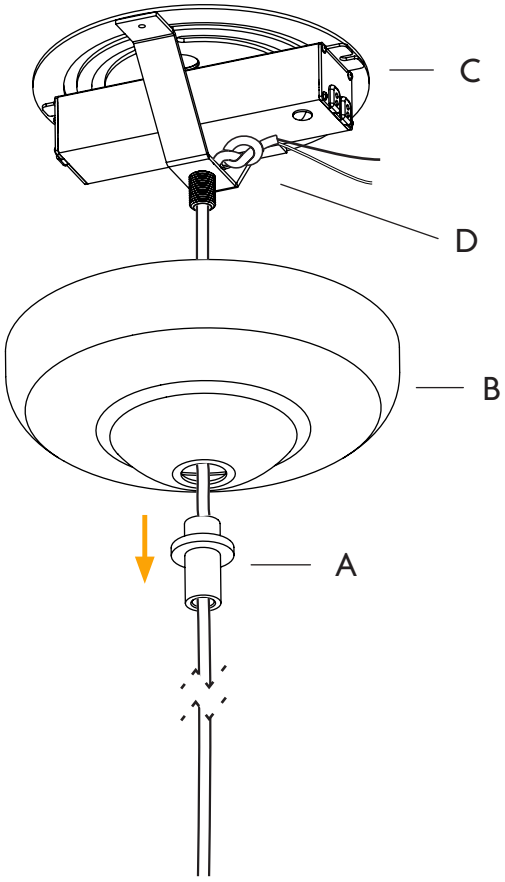

Humboldt Pendant 01| INSTALLATION

Note: Please contact a licensed electrician for installation. Ensure power is off during installation.

03. Raise the crossbar assembly (C) to the J-box (E), and make the main electrical connection (F) with the provided 2-port wagos. Then ground connection (G) with provided 2-port wago.
04. Optional: make the dimming wire connection (H) with the provided 2-port wagos.
05. Tuck the wires inside J-box, and secure the crossbar to J-box with two 8-32 screws (I).
06. Make the low voltage wire connection (J) with the provided 2-port wagos.
    (Connect black wire from LED driver to black wire from the cord).
    (Connect red wire from the LED driver to the white wire from the cord).

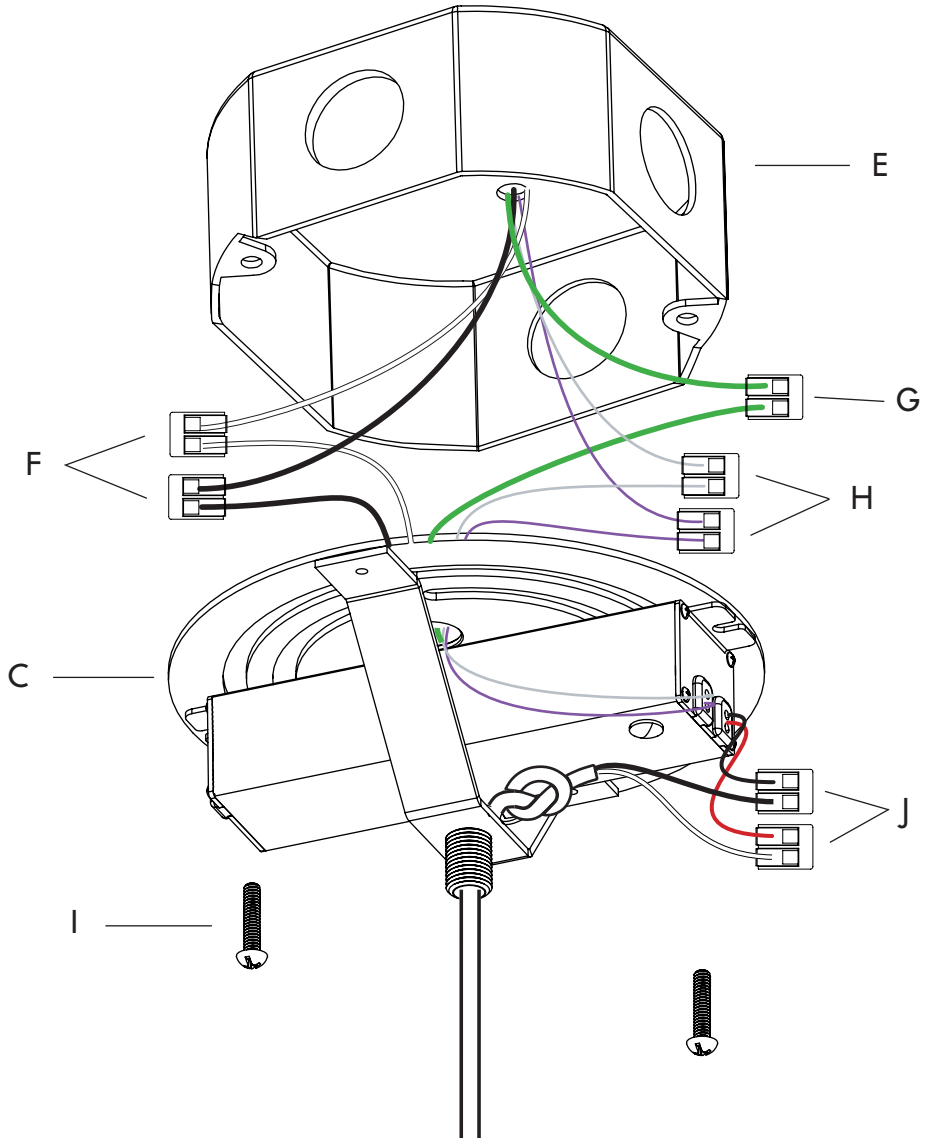

Humboldt Pendant 01| INSTALLATION

Note: Please contact a licensed electrician for installation. Ensure power is off during installation.

07. Raise the canopy (B) over the crossbar, make sure not to pinch any wires, and secure it with a canopy nut (A).

